

COMe-bKL6

Doc. User Guide Rev.1.8

Doc. ID: 1061-1954

This page has been intentionally left blank

COME-BKL6 - USER GUIDE

Disclaimer

Kontron would like to point out that the information contained in this user guide may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the user guide or any product characteristics set out in the user guide. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this user guide are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this user guide only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This user guide is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this user guide is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this user guide only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners. ©2018 by Kontron Europe GmbH

Kontron Europe GmbH
Gutenbergstraße 2
85737 Ismaning
Germany
www.kontron.com

High Risk Applications Hazard Notice

THIS DEVICE AND ASSOCIATED SOFTWARE ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF NUCLEAR FACILITIES, THE NAVIGATION, CONTROL OR COMMUNICATION SYSTEMS FOR AIRCRAFT OR OTHER TRANSPORTATION, AIR TRAFFIC CONTROL, LIFE SUPPORT OR LIFE SUSTAINING APPLICATIONS, WEAPONS SYSTEMS, OR ANY OTHER APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK APPLICATIONS").

You understand and agree that your use of Kontron devices as a component in High Risk Applications is entirely at your risk. To minimize the risks associated with your products and applications, you should provide adequate design and operating safeguards. You are solely responsible for compliance with all legal, regulatory, safety, and security related requirements concerning your products. You are responsible to ensure that your systems (and any Kontron hardware or software components incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron device is not provided with error-tolerance capabilities and cannot therefore be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as device in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

NOTICE

You find the most recent version of the "General Safety Instructions" online in the download area of this product.

NOTICE

This product is not suited for storage or operation in corrosive environments, in particular under exposure to sulfur and chlorine and their compounds. For information on how to harden electronics and mechanics against these stress conditions, contact Kontron Support.

Revision History

Revisi	Brief Description of Changes	Date of Issue	Author /Edito r
1.0	Initial version	2017-July- 05	CW
1.1	Updated BIOS set up option information in Chapters 3.2.2 and 6.5.1 Updated test Information in Chapter Standards and Certifications	2017-Aug-22	CW
1.2	Updated Kontron to Kontron S&T AG, added a GPIO Chapter and Updated the BIOS Setup information in Advanced menu and Chipset menu	2018-Jan-23	CW
1.3	Included the MTBF graphs	2020-Jan-08	CW
1.4	Added rapid shutdown function information	2020-Jun-29	CW
1.5	Updated Accessories	2020-Jul-23	CW
1.6	Security chip changed to option and new block diagram	2022-Feb-23	CW
1.7	GPIO update Chapter 3.2	2022-Jul-28	CW
1.8	Rapid Shutdown removed	2025-Dec-01	ВаН

Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit http://www.kontron.com/terms-and-conditions.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit $\frac{\text{http://www.kontron.com/terms-and-conditions.}}{\text{http://www.kontron.com/terms-and-conditions.}}$

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website CONTACT US.

Customer Support

Find Kontron contacts by visiting: $\underline{\text{http://www.kontron.com/support}}$.

Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.

For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit $\frac{\text{http://www.kontron.com/support-and-services/services}}$.

Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact <u>Kontron support</u>. Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

Symbols

The following symbols may be used in this user guide

ADANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

▲WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE indicates a property damage message.

ACAUTION

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of products. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.



ESD Sensitive Device!

This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.



HOT Surface!

Do NOT touch! Allow to cool before servicing.



Laser!

This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.



This symbol indicates general information about the product and the user guide.

This symbol also indicates detail information about the specific product configuration.



This symbol precedes helpful hints and tips for daily use.

For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions

As a precaution and in case of danger, the power connector must be easily accessible. The power connector is the product's main disconnect device.

ACAUTION

Warning

All operations on this product must be carried out by sufficiently skilled personnel only.

ACAUTION

Electric Shock!



Before installing a non hot-swappable Kontron product into a system always ensure that your mains power is switched off. This also applies to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair, and maintenance operations on this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing any work on this product.

Earth ground connection to vehicle's chassis or a central grounding point shall remain connected. The earth ground cable shall be the last cable to be disconnected or the first cable to be connected when performing installation or removal procedures on this product.

Special Handling and Unpacking Instruction

NOTICE

ESD Sensitive Device!



Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

ACAUTION

Handling and operation of the product is permitted only for trained personnel within a work place that is access controlled. Follow the "General Safety Instructions for IT Equipment" supplied with the product.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the product is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the product.

Lithium Battery Precautions

If your product is equipped with a lithium battery, take the following precautions when replacing the battery.

ACAUTION

Danger of explosion if the battery is replaced incorrectly.

- Replace only with same or equivalent battery type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the product, that are not explicitly approved by Kontron and described in this user guide or received from Kontron Support as a special handling instruction, will void your warranty.

This product should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This also applies to the operational temperature range of the specific board version that must not be exceeded. If batteries are present, their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, only follow the instructions supplied by the present user guide.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the product then re-pack it in the same manner as it was delivered.

Special care is necessary when handling or unpacking the product. See Special Handling and Unpacking Instruction.

Quality and Environmental Management

Kontron aims to deliver reliable high-end products designed and built for quality, and aims to complying with environmental laws, regulations, and other environmentally oriented requirements. For more information regarding Kontron's quality and environmental responsibilities, visit http://www.kontron.com/about-kontron/corporate-responsibility/quality-management.

Disposal and Recycling

Kontron's products are manufactured to satisfy environmental protection requirements where possible. Many of the components used are capable of being recycled. Final disposal of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

WEEE Compliance

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- Reduce waste arising from electrical and electronic equipment (EEE)
- ▶ Make producers of EEE responsible for the environmental impact of their products, especially when the product become waste
- ▶ Encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- Improve the environmental performance of all those involved during the lifecycle of EEE



Environmental protection is a high priority with Kontron. Kontron follows the WEEE directive

You are encouraged to return our products for proper disposal.

Table of Contents

Symbols	
For Your Safety	
High Voltage Safety Instructions	
Special Handling and Unpacking Instruction	8
Lithium Battery Precautions	. 10
General Instructions on Usage	
Quality and Environmental Management	
Disposal and Recycling	
WEEE Compliance	.10
Table of Contents	. 12
List of Tables	
List of Figures	
1/ Introduction	.16
1.1. Product Description	
1.2. Product Naming Clarification	.16
1.3. COM Express® Documentation	.16
1.4. COM Express® Functionality	17
1.5. COM Express® Benefits	. 17
2/ Product Specification	. 18
2.1. Module Variants	. 18
2.1.1. Commercial Grade Modules (0°C to +60°C)	. 18
2.1.2. Extended Temperature Grade Modules (E1,-25°C to +75°C)	.18
2.1.3. Industrial Temperature Grade Modules (E2S, -40°C to +85°C)	.19
2.2. Accessories	.19
2.3. Functional Specifications	. 23
2.3.1. Block Diagram COMe-bKL6	. 23
2.3.2. Processor	. 24
2.3.3. Platform Controller Hub	. 25
2.3.4. System Memory	. 25
2.3.5. Graphics	. 26
2.3.6. LVDS	. 26
2.3.7. Audio	. 28
2.3.8. PCI Express (PCIE) Configuration	. 28
2.3.9. USB	30
2.3.10. SATA	30
2.3.11. Ethernet	30
2.3.12. COMe High-speed Serial Interfaces Overview	31
2.3.13. Storage Features	32
2.3.14. BIOS/Software Features	32
2.3.15. COMe Features	32
2.3.16. Kontron Features	32
2.4. Electrical Specification	33
2.4.1. Power Supply Voltage Specifications	33
2.4.2. Power Management	33
2.4.3. Power Supply Control Settings	
2.4.4. Power Supply Modes	. 34
2.5. Thermal Management	27
	3/
2.5.1. Heatspreader and Active or Passive Cooling Solutions	

2.5.3. Operating with Kontron Heatspreader Plate (HSP) Assembly	
2.5.4. Operating without Kontron Heatspreader Plate (HSP) Assembly	
2.5.5. On Board Fan Connector	38
2.6. Environmental Specification	39
2.6.1. Temperature	39
2.6.2. Humidity	39
2.7. Standards and Certifications	40
2.7.1. MTBF	41
2.8. Mechanical Specification	44
2.8.1. Dimensions	44
2.8.2. Height	44
2.8.3. Heatspreader Dimensions	45
3/ Features and Interfaces	46
3.1. Fast I2C	46
3.2. GPIO	46
3.3. Intel® Optane™ Memory	
3.4. Kontron Security Solution (optional)	46
3.5. LPC	46
3.6. Rapid Shutdown	47
3.7. Real Time Clock (RTC)	
3.8. Serial Peripheral Interface (SPI)	
3.8.1. SPI boot	
3.8.2. Using an External SPI Flash	
3.8.3. External SPI flash on Modules with Intel® ME	
3.9. SpeedStep® Technology	
3.10. Trusted Platform Module (TPM 2.0)	
3.11. UART	
3.12. Watchdog Timer (WTD) - Dual Stage	
3.12.1. WDT Signal	
4/ System Resources	
4.1. Interrupt Request (IRQ) Lines	
4.2. Memory Area	
4.3. I/O Address Map	
4.4. Peripheral Component Interconnect (PCI) Devices	
4.5. I2C Bus	
4.6. System Management (SM) Bus	
5/ COMe Interface Connectors	
5.1. X1A and X1B Signals	
5.2. X1A and X1B Pin Assignment	
5.2.1. Connector X1A Row A1 - A110	
5.2.2. Connector X1A Row B1 - B100	
5.2.3. Connector X1B Row C1 - C110	
5.2.4. Connector X1B Row D1 - D110	
6/ uEFI BIOS	
6.1. Starting the uEFI BIOS	
6.2. Setup Menus	
6.2.1. Main Setup Menu	
6.2.2. Advanced Setup Menu	
6.2.3. Chipset Setup Menu	
6.2.4. Security Setup Menu	
6.2.5. Boot Setup Menu	101

6.2.6. Save and Exit Setup Menu	.04 .05 .05 .05 .05
List of Tables	
Table 1: Pin Assignment of Type 6 and COMe-bKL6. Table 2: Product Number for Commercial Grade Modules (0°C to +60°C operating) Table 3: Product Number for Industrial Grade Modules including Rapid Shutdown (R E2S, 40°C to +85°C operating) Table 4: Product Accessories - COMe-bKL6 Table 5: COMe Type 6 Accessories Table 6: General Accessories Table 6: General Accessories Table 7: Memory Modules - COMe-bKL6 Table 8: Processor Specifications Table 9: Heatspreader Test Temperature Specifications Table 10: 3-Pin Fan Connector Fin Assignment Table 10: 3-Pin Fan Connector Fin Assignment Table 11: Electrical Characteristics of the Fan Connector Table 12: Temperature Grade Specifications Table 13: Humidity Specification Table 14: Standards and Certification Compliance Table 15: MTBF Estimated Values Table 16: Supported BIOS Features Table 17: SPI Boot Fin Configuration Table 18: Supported SPI Boot Flash Types for 8-SOIC Package Table 19: Dual Stage Watchdog Timer - Time-out Events Table 20: Interrupt Requests Table 21: Designated Memory Locations Table 22: Designated Memory Locations Table 23: I2C Bus Port Addresses Table 24: SMBus Addresses Table 25: General Signal Description Table 26: Connector XIA Row A Pin Assignment (A1-A110) Table 27: Connector XIA Row A Pin Assignment (B1-B110) Table 28: Connector XIA Row C Pin Assignment (B1-B110) Table 29: Connector XIA Row D Pin Assignment (B1-B110) Table 29: Connector XIA Row D Pin Assignment (B1-B110) Table 30: Navigation Hot Keys Available in the Legend Bar Table 31: Main Setup Menu Sub-screens and Functions Table 33: Chipset Set > System Agent Configuration Sub-screens and Functions Table 36: Boot Setup Menu Functions Table 37: Save and Exit Setup Menu Functions Table 38: List of Acronyms	18 19 19 19 19 19 19 19 19 19 19 19 19 19
List of Figures	
Figure 1: COMe-bKL6 Functional Block Diagram	23

Figure 2: MTBF De-rating Values @ 40°C for the COMe-bKL6 i3-7102E CM238 (MTBF: 598847
hours)
Figure 3: MTBF De-rating Values @ 40°C for the COMe-bKL6 E2S E3-1505M CM238 (MTBF:
542327 hours)
Figure 4: Module Dimensions
Figure 5: Module Height
Figure 6: Heatspreader Location and Dimensions
Figure 7: X1A and X1B COMe Interface Connectors56
Figure 8: Main Setup Menu Initial Screens74
Figure 9: Advanced Setup Menu Initial Screen
Figure 10: System Agent Configuration Menu Initial Screen
Figure 11: PCH-IO Configuration Menu Initial Screen93
Figure 12: Security Setup Menu Initial Screen
Figure 13: Boot Setup Menu Initial Screen
Figure 14: Save and Exit Setup Menu Initial Screen

1/Introduction

1.1. Product Description

The COMe-bKL6 is a basic form factor COM Express® type 6 Computer-On-Module based on the Intel® 7^{th} Generation Core™ series family of processors, known as Kaby Lake-H within this user guide. The COMe-bKL6 supports additional communication interfaces via a separate chipset Intel's® mobile (CM238 or QM175). The Kaby Lake-H combines increased efficiency and performance with TDP as low as 25 W, and no more then 45 W, with Intel's ® HD Graphics Gen9 capabilities.

Basic COMe-bKL6 features are:

- Intel® 7th Generation Core™ series, Kaby Lake-H family with CM238/QM175
- ▶ Up to 32 GByte with 2 x DDR4-2400 SO-DIMM (non-ECC/ECC)
- ▶ High-speed connectivity 8x PCIe x1, 1x PEG x16, 1x 1 Gb Ethernet, 4x USB 3.0 (incl. USB 2.0) + 4x USB 2.0
- Support for both commercial and Industrial temperature grade environments

1.2. Product Naming Clarification

COM Express® defines a Computer-On-Module, or COM, with all the components necessary for a bootable host computer, packaged as a super component. The product names for Kontron COM Express® Computer-on-Modules consist of:

- Short form of the industry standard
 - COMe-
- Module form factor
 - b=basic (125mm x 95mm)
 - c=compact (95mm x 95mm)
 - m=mini (84mm x 55mm)
- Intel's® processor code name
 - KL = Kaby Lake
- Pinout type
 - Type 6
 - Type10
- Available temperature variants
 - Commercial
 - Extended (E1)
 - ▶ Industrial (E2)
 - Screened industrial (E2S) and Rapid shutdown screened industrial (R E2S)
- Processor Identifier
- Chipset identifier (if chipset assembled)
- Memory size
 - ▶ Memory module (#G) / eMMC SLC memory (#S)

1.3. COM Express® Documentation

The COM Express® specification defines the COM Express® module form factor, pinout and signals. The COM Express document is available on the PICMG® website.

1.4. COM Express® Functionality

All Kontron COM Express® basic and compact modules contain two 220-pin connectors. Each connector has two rows called Row A & B on the primary connector and Row C & D on the secondary connector. COM Express® Computer-On-Modules feature the following maximum amount of interfaces according to the PICMG module pinout type.

Table 1: Pin Assignment of Type 6 and COMe-bKL6

Feature	Type 6 Pinout	COMe-bKL6 Pinout
HD Audio	1x	1x
Gbit Ethernet	1x	1x
Serial ATA	4 x	4 x
PCI Express x 1	8x	8x
PCI Express x16 (PEG)	1x	1x
USB Client	1x (optional)	1x (optional)
USB	4x USB 3.0 (Incl. USB 2.0)	4x USB 3.0 (Incl. USB 2.0)
	+ 4x USB 2.0	+ 4x USB 2.0
VGA	1x	1x optional DP to VGA converter
LVDS (eDP)	Dual Channel	Dual Channel LVDS with option to overlay (eDP)
DP++ (DP/HDMI/DVI)	3x	3x
LPC	1x	1x
External SMB	1x	1x
External I2C	1x	1x
GPIO	8x	8x
SDIO shared w/GPIO		
UART (2-wire COM)	2x	2x
FAN PWM out	1x	1x

1.5. COM Express® Benefits

COM Express® defines a Computer-On-Module, or COM, with all the components necessary for a bootable host computer, packaged as a highly integrated computer. All Kontron COM Express® modules are very compact and feature a standardized form factor and a standardized connector layout that carry a specified set of signals. Each COM is based on the COM Express® specification. This standardization allows designers to create a single-system baseboard that can accept present and future COM Express® modules.

The baseboard designer can optimize exactly how each of these functions implements physically. Designers can place connectors precisely where needed for the application, on a baseboard optimally designed to fit a system's packaging.

A single baseboard design can use a range of COM Express® modules with different sizes and pinouts. This flexibility differentiates products at various price and performance points and provides a built-in upgrade path when designing future-proof systems. The modularity of a COM Express® solution also ensures against obsolescence when computer technology evolves. A properly designed COM Express® baseboard can work with several successive generations of COM Express® modules.

A COM Express® baseboard design has many advantages of a customized computer-board design and, additionally, delivers better obsolescence protection, heavily reduced engineering effort, and faster time to market.

2/Product Specification

2.1. Module Variants

The COMe-bKL6 is available in different processor, chipset and temperature variants to cover demands in performance, price and power.

2.1.1. Commercial Grade Modules (0°C to +60°C)

Table 2: Product Number for Commercial Grade Modules (0°C to +60°C operating)

Product Number	Product Name	Description
38032-0000-30-4	COMe-bKL6 E3-1505M CM238	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Xeon® E3- 1505M v6, 4x3.0GHz, CM238 PCH, GT2, 2x DDR4 non-ECC/ECC SO-DIMM
38032-0000-22-4	COMe-bKL6 E3-1505L CM238	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Xeon® E3- 1505L v6, 4x2.2GHz, CM238 PCH, GT2, 2x DDR4 non-ECC/ECC SO-DIMM
38032-0000-30-7	COMe-bKL6 i7-7820EQ QM175	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Core™ i7- 7820EQ, 4x3.0GHz, QM175 PCH, GT2, 2x DDR4 non-ECC SO-DIMM
38032-0000-29-5	COMe-bKL6 i5-7440EQ QM175	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Core™ i5- 7440EQ, 4x2.9GHz, QM175 PCH, GT2, 2x DDR4 non-ECC SO-DIMM
38032-0000-21-5	COMe-bKL6 i5-7442EQ QM175	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Core™ i5- 7442EQ, 4x2.1GHz, QM175 PCH, GT2, 2x DDR4 non-ECC SO-DIMM
38032-0000-29-3	COMe-bKL6 i3-7100E CM238	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Core™ i3- 7100E, 2x2.9 GHz, CM238 PCH, GT2, 2x DDR4 non-ECC/ECC SO-DIMM
38032-0000-21-3	COMe-bKL6 i3-7102E CM238	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Core™ i3- 7102E, 2x2.1 GHz, CM238 PCH, GT2, 2x DDR4 non-ECC/ECC SO-DIMM

2.1.2. Extended Temperature Grade Modules (E1,-25 $^{\circ}$ C to +75 $^{\circ}$ C)

Extended temperature grade modules (E1, $-25\,^{\circ}\text{C}$ to $+75\,^{\circ}\text{C}$) are available as a standard product number, on request. Contact your local sales representative to find out more about available extended temperature variants.

2.1.3. Industrial Temperature Grade Modules (E2S, -40°C to +85°C)

Industrial temperature grade modules (E2S, $-40\,^{\circ}$ C to $+85\,^{\circ}$ C) are available as a project based custom product number. For further information, contact your local sales representative. Alternatively, consider using the R E2S variants.

2.1.3.1. Rapid Shutdown Industrial Temperature Grade Modules (R E2S, -40°C to +85°C)

The following table lists R E2S modules available with Kontron Rapid Shutdown support and E2 industrial temperature grade $(-40\,^{\circ}\text{C}$ to $+85\,^{\circ}\text{C})$ by screening.



For Further information regarding the screening process, contact Kontron Support.

Table 3: Product Number for Industrial Grade Modules including Rapid Shutdown (R E2S, -40° C to $+85^{\circ}$ C operating)

Product Number	Product Name	Description
38033-0000-30-4	COMe-bKL6R E2S E3-1505M CM238	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Xeon® E3- 1505M v6, 4x3.0GHz, CM238 PCH, GT2, 2x DDR4 non-ECC/ECC SO-DIMM, Rapid Shutdown, industrial temperature grade
38033-0000-22-4	COMe-bkL6R E2S E3-1505L CM238	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Xeon® E3- 1505L v6, 4x2.2GHz, CM238 PCH, GT2, 2x DDR4 non-ECC/ECC SO-DIMM, Rapid Shutdown, industrial temperature grade
38033-0000-29-3	COMe-bkL6R E2S i3-7100E CM238	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Core™ i3- 7100E, 2x2.9 GHz, CM238 PCH, GT2, 2x DDR4 non-ECC/ECC SO-DIMM, Rapid Shutdown, industrial temperature grade
38033-0000-21-3	COMe-bKL6R E2S i3-7102E CM238	COM Express® basic pin-out type 6 Computer-on-Module with Intel® Core™ i3- 7102E, 2x2.1 GHz, CM238 PCH, GT2, 2x DDR4 non-ECC/ECC SO-DIMM, Rapid Shutdown, industrial temperature grade

2.2. Accessories

Accessories are either COMe-bKL6 product specific, type 6 COMe pinout specific, or general accessories including memory modules. For more information, contact your local Kontron sales representative or Kontron Inside Sales.

Table 4: Product Accessories - COMe-bKL6

Part Number	Heatspreader	Description
38030-0000-99-0	HSP COMe-bSL6/bKL6 Cu-core threaded	For all CPUs and temperature grades
38030-0000-99-1	HSP COMe-bSL6/bKL6 Cu-core through	For all CPUs and temperature grades

Table 5: COMe Type 6 Accessories

Part Number	COMe Carrier	Project Code	Description
38115-0000-00-x	COM Express® Reference Carrier-i Type 6	ADTI	Thin-mITX Carrier with 5 mm COMe connector
38116-0000-00-5	COM Express® Eval Carrier2 Type 6	ADT6	ATX Carrier with 5 mm COMe connector
Part Number	COMe Adapter / Card	Project Code	Description
96007-0000-00-3	ADA-PCIe-DP	APDP	PCIe x16 to DP Adapter for Evaluation Carrier
96007-0000-00-7	ADA-Type6-DP3	DVO6	(Sandwich) Adapter Card for 3x DisplayPort
96006-0000- 00-2	COMe POST T6	NFCB	POST Code / Debug Card
38019-0000- 00-0	ADA-COMe-Height-dual	EERC	Height Adapter

Table 6: General Accessories

Part Number	Cooling Solutions	Description
38025-0000-99- 0C05	HSK COMe-bHL6/bBL6/bSL6/bKL6 active (w/o HSP)	For all CPUs and commercial temperature grade usage, to be mounted on HSP
38025-0000-99- 0C06	HSK COMe-bHL6/bBL6/bSL6/bKL6 passive (w/o HSP)	For all CPUs and commercial temperature grade usage, to be mounted on HSP
Part Number	Mounting	Description
38017-0000-00-5	COMe Mount KIT 5 mm 1 set	Mounting Kit for 1 module including screws for 5 mm connectors
38017-0100-00-5	COMe Mount KIT 5 mm 100 sets	Mounting Kit for 100 modules including screws for 5 mm connectors
38017-0000-00-0	COMe Mount KIT 8 mm 1 set	Mounting Kit for 1 module including screws for 8 mm connectors
38017-0100-00-0	COMe Mount KIT 8 mm 100 sets	Mounting Kit for 100 modules including screws for 8 mm connectors
Part Number	Display Adapter	Description
96006-0000-00-8	ADA-DP-LVDS	DP to LVDS adapter
96082-0000-00-0	KAB-ADAPT-DP-DVI	DP to DVI adapter cable
96083-0000-00-0	KAB-ADAPT-DP-VGA	DP to VGA adapter cable
96084-0000-00-0	KAB-ADAPT-DP-HDMI	DP to HDMI adapter cable
Part Number	Cables	Description
96079-0000-00-0	KAB-HSP 200mm	Cable adapter to connect fan to module (COMe basic/compact)

96079-0000-00-2	KAB-HSP 40 mm	Cable adapter to connect fan to
		module
		(COMe basic/compact)

Table 7: Memory Modules - COMe-bKL6


Part Number	Memory (validated reference t	ypes)
97017-4096-24-0	DDR4-2400 SODIMM 4 GB_COM	DDR4-2400, 4GB, 260P, 1200MHz, PC4-2400 SO-DIMM
97017-8192-24-0	DDR4-2400 SODIMM 8 GB_COM	DDR4-2400, 8GB, 260P, 1200MHz, PC4-2400 SO-DIMM
97017-1600-24-0	DDR4-2400 SODIMM 16 GB_COM	DDR4-2400, 16GB, 260P, 1200MHz, PC4- 2400 SO-DIMM
97017-4096-24-2	DDR4-2400 SODIMM 4 GB E2_COM	DDR4-2400, 4GB, E2, 260P, 1200MHz, PC4- 2400 SO-DIMM
97017-8192-24-2	DDR4-2400 SODIMM 8 GB E2_COM	DDR4-2400, 8GB, E2, 260P, 1200MHz, PC4- 2400 SO-DIMM
97017-1600-24-2	DDR4-2400 SODIMM 16 GB E2_COM	DDR4-2400, 16GB, E2, 260P, 1200MHz, PC4-2400 SODIMM
Part Number	Memory ECC (validated referen	ce types)
97018-4096-24-0	DDR4-2400 SODIMM 4 GB ECC_COM	DDR4-2400, 4GB, ECC, 260P, 1200MHz, PC4-2400 SO-DIMM
97018-8192-24-0	DDR4-2400 SODIMM 8 GB ECC_COM	DDR4-2400, 8GB, ECC, 260P, 1200MHz, PC4-2400 SO-DIMM
97018-1600-24-0	DDR4-2400 SODIMM 16 GB ECC_COM	DDR4-2400, 16GB, ECC, 260P, 1200MHz, PC4-2400 SO-DIMM
97018-4096-24-2	DDR4-2400 SODIMM 4 GB ECC E2_COM	DDR4-2400, 4GB, ECC, E2, 260P, 1200MHz, PC4-2400 SO-DIMM
97018-8192-24-2	DDR4-2400 SODIMM 8 GB ECC E2_COM	DDR4-2400, 8GB, ECC, E2, 260P, 1200MHz, PC4-2400 SO-DIMM
97018-1600-24-2	DDR4-2400 SODIMM 16 GB ECC E2_COM	DDR4-2400, 16GB, ECC, E2, 260P, 1200MHz, PC4-2400 SO-DIMM

2.3. Functional Specifications

2.3.1. Block Diagram COMe-bKL6

The following figure displays the system block diagram applicable to all COMe-bKL6 modules.

Figure 1: COMe-bKL6 Functional Block Diagram

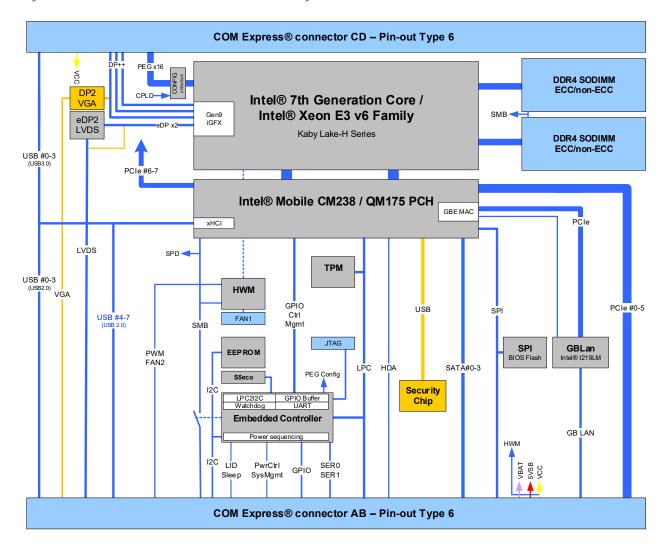

2.3.2. Processor

The Intel® 7th Generation Kaby Lake - H product series of Intel® Xeon® and Core m_1 processors uses the 14 nm processor technology with 42 mm x 28 mm package size and BGA 1440.

General processor specifications shared by the Intel® Core $^{\text{\tiny{IM}}}$ and Celeron® processor variants are:

- Intel® 64 Architecture
- ▶ Idle States
- ▶ Intel® Virtualization Technology (VT-x)
- Virtualization Technology for Directed I/O (VT-d)
- ► Enhanced Intel Speedstep® Technology
- ► Thermal Monitoring Technology
- ► Intel® AES New Instructions (AES-NI)
- OS Guard
- Execute Disable Bit

The following table lists the general Intel® Xeon® and Core $^{\text{\tiny{TM}}}$ Kaby Lake- H processor specifications.



Not all the items specified in Table 8: Processor Specifications are compatible with the COMe-bKL6 functional specification. For more information on features supported by the COMe-bKL6, see the relevant subheading in Chapter 2.3 Functional Specifications.

Table 8: Processor Specifications

Intel®	Xeon®	Xeon®	Core™	Core™	Core™	Core™	Core™
Kaby lake-H	E3-1505L	E3-1505M	i7 -	i5-	i5-	i3-	i3-
Processor	v6	v6	7820EQ	7442EQ	7440EQ	7100E	7102E
# of Cores	4	4	4	4	4	2	2
# of Threads	8	8	8	4	4	4	4
Processor Base Frequency	2.2 GHz	3 GHz	3 GHz	2.1 GHz	2.9 GHz	2.9 GHz	2.1 GHz
Max Turbo Frequency	3 GHz	4 GHz	3.7 GHz	2.9 GHz	3.6 GHz	2.9 GHZ	2.1 GHz
Thermal Design Power (TDP)	25 W	45 W	45 W	25 W	45 W	35 W	25 W
TDP down		35 W	35 W		35 W		
Cache	8 MB	8 MB	8 MB	6 MB	6 MB	3 MB	3 MB
Memory Types	DDR4-2400	DDR4-2400 LPDDR- 2133 DDR3L- 1600	DDR4-2400	DDR4-2400	DDR4-2400	DDR4-2400	DDR4-2400
Max.# Mem. Channels	2	2	2	2	2	2	2

Intel®	Xeon®	Xeon®	Core™	Core™	Core™	Core™	Core™
Kaby lake-H	E3-1505L	E3-1505M	i7 -	i5-	i5-	i3-	i3-
Processor	v6	v6	7820EQ	7442EQ	7440EQ	7100E	7102E
Max. Memory Size	64 GB						
Max. Memory Bandwidth	34.1 GB/s						
ECC Memory	Supported	Supported	Not supported	Not supported	Not supported	Supported	Supported
HD Graphics	HD Graphic P630	HD Graphics P630	HD Graphics 630	HD Graphics 630	HD Graphics 630	HD Graphics 630	HD Graphics 630
PCIe Express Configuration	1x16, 2x8, 1x8+2x4						
Max. # PCIe Lanes	16	16	16	16	16	16	16

2.3.3. Platform Controller Hub

The Kaby Lake -H series of processors is a two-chip solution implementing either the mobile Intel® CM238 chipset or mobile Intel® QM175 chipset, for the Platform Controller Hub (PCH). Which chipset is implemented depends on the temperature grade and processor variant:

- ▶ Intel® QM175 (Commercial temperature grades for all Core™ i5, Core™ i7 processor variants)
- ▶ Intel® CM238 (Commercial temperature grades for all Core™ i3, Xeon® E3 processor variants)
- ▶ Intel® CM238 (Industrial temperature grades for all processor variants)

The following table lists the specific PCH features.

Intel ® Optane™	Supported
Rapid Storage Technology (RST)	Supported
USB	4x USB 3.0 (Incl. USB 2.0) 4x USB 2.0
VT-d	Supported
SATA RAID	Supported

2.3.4. System Memory

The system memory supports two memory channels with DDR4-2400 SO-DIMM sockets for up a maximum of up to 32 GByte (2x 16 GByte) of non ECC/ECC memory modules.

The following table lists the specific system memory features.

Socket	2x DDR4-2400 SO-DIMM
Memory Type	Channel 1: DDR4-2400 SO-DIMM up to 16 GB
	Channel 2: DDR4-2400 SO-DIMM up to 16 GB
Memory Module Size	4 GBytes, 8 GByte and 16 GByte
Bandwidth	34.1 GB/s at 2400 MT/s

In general, memory modules have a much lower longevity than embedded motherboards, and therefore the EOL of the memory modules may occur several times during the lifetime of the motherboard. Kontron guarantees to maintain memory modules by replacing EOL memory modules with another qualified similar module.

As a minimum, it is recommend to use Kontron memory modules for prototype system(s) in order to prove the stability of the system and as a reference.

For volume production, if required, test and qualify other types of RAM. In order to qualify RAM it is recommend to configure three systems running a RAM Stress Test program in a heat chamber at 60° C, for a minimum of 24 hours.



For a list of Kontron memory modules, see Table 7: Memory Modules.

2.3.5. Graphics

2.3.5.1. Digital Display Interface

Up to three independent Digital Display Interfaces (DDIs) including (eDP) can be used simultaneously and in combination, to implement an independent or cloned display configuration. A VGA option is available that utilizes DDI3.

The standard DDIs are:

- \triangleright 3x DP 1.2 (++) on DDI1, DDI2 and DDI3
- 1x eDP 1.4/LVDS on DDI0
- Optional VGA Display port to VGA converter (DP2VGA) on DDI3

2.3.5.2. Display Resolution

The following table lists the maximum display resolutions at a set frequency and bit per pixel (bpp) for the supported display interfaces.

Display Interfaces	Maximum Resolution
eDP	4096 x 2304 (60 Hz, 24 bpp)
DP+	4096 x 2304 (60 Hz, 24 bpp)
HDMI 1.4 (native)	4096 x 2160 (24 Hz, 24 bpp)
HDMI 2.0 (via LS-Pcon)	4096 x 2160 (60 Hz, 24 bpp)
VGA	1920 x 1200 (60 Hz, 24 bpp)



At 4K/UHD resolution, a DisplayPort redriver on the carrier is recommended to increase the link margin.

2.3.6. LVDS

The embedded display port to LVDS bridge (eDP2LVDS) supports dual LVDS 18-bit or 24-bit.channels.

The following table lists the basic LVDS features.

LVDS Channels	2x
LVDS Bits / Pixel	18-bit; 24-bit
LVDS Maximum Resolution	Up to 1920 x 1200

PWM Backlight Control	I2C/PWM backlight support			
Supported Panel Data	JILI; EDID, VESA DID			

2.3.7. Audio

Three independent HD Audio streams can be supported simultaneously on HDMI and DP. The default for audio support is over the Display Port (DP), with an additional option for baseboard audio via an external HDA codec on the carrier board.

2.3.8. PCI Express (PCIE) Configuration

The COMe-bKL6 supports eight general-purpose PCI Express lanes and one PCI Express Graphic (PEG) port with 16 lanes.

2.3.8.1. General-Purpose PCI-Express Lanes [0-7]

The COMe connector supports eight general-purpose PCIe lanes [PCIE0-PCIE7]. The COMe signals [PCIE0-PCIE3] serve as an additional Intel PCIe Storage Device #1.

The following table lists the supported general-purpose PCI-Exp	press lanes.
---	--------------

COMe Lane	PSH High-speed I/O Port #	PCH I/O Function	Comment
PCIE0	15	PCIe #9	Also serves as an Intel® PCIe
PCIE1	16	PCIe #10	Storage Device #1
PCIE2	17	PCIe #11	Device #1
PCIE3	18	PCIe #12	
PCIE4	7	PCIe #1	
PCIE5	8	PCIe #2	
PCIE6	9	PCIe #3	
PCIE7	10	PCIe #4	

2.3.8.2. PCI-Express Graphics x16 (PEG) Port

One PCI Express Graphics \times 16 (PEG) port is available on the COMe connector. The PEG port's default configuration is

 1×16 non-reversed with additional configuration options 1×16 , 2×8 , and $1 \times 8 + 2 \times 4$ in both non-reversed and reversed directions. The configuration can be changed in the BIOS setup.

If more than one device is connected then the device with the highest lane count should be connected to the lower lanes. For example, connect PEG lane 0 to lane 0 of the device with the highest lane count. For lane reversal, the opposite is true. In this case, connect the device with the highest lane count to the higher lanes. For example, connect PEG lane 15 to lane 0 of the device.

The following table lists the PCI-Express Graphics x16 (PEG) port bifurcation and non-reversed lane mapping options.

COMe PEG	(1 x16) Non-Reversed		(2x	(2x8) Non-Reversed		(1x8 + 2x4) Non- Reversed	
Lane 0	0	Linked with	0	Linked with	0	Linked with	
Lane 1	1	[0:1:0]	1	[0:1:0]	1	[0:1:0]	
Lane 2	2	[Segment:Bus:Devi	2	[Segment:Bus:Devi	2		
Lane 3	3	ce]	3	ce]	3	[Segment:Bus:Devi	
Lane 4	4		4		4	ce]	
Lane 5	5		5		5		
Lane 6	6		6		6		
Lane 7	7		7		7		
Lane 8	8		0	Linked with	0	Linked with	
Lane 9	9		1	[0:1:1]	1	[0:1:1]	
Lane 10	10		2	[Segment:Bus:Devi	2	[Segment:Bus:Devi	
Lane 11	11		3	ce]	3	ce]	
Lane 12	12		4		0	Linked with	
Lane 13	13		5		1	[0:1:2]	
Lane 14	14		6		2	[Segment:Bus:Devi	
Lane 15	15		7		3	ce]	

The following table lists the PCI-Express Graphics x16 (PEG) port bifurcation and reversed lane mapping options.

COMe PEG	(1	x16) Reversed	(2×	8) Reversed	(1>	x8 + 2x4) Reversed
Lane 0	15	Linked with 0:1:0	7	Linked with 0:1:1	3	Linked with
Lane 1	14	[Cogmon+.Dug.Dozzi	6	[Cogmon+.Dug.Dozzi	2	0:1:2
Lane 2	13	[Segment:Bus:Devi	5	[Segment:Bus:Devi ce]	1	[Segment:Bus:Devi
Lane 3	12		4	-	0	ce]
Lane 4	11		3		3	Linked with:0:1:1
Lane 5	10		2		2	
Lane 6	9		1		1	[Segment:Bus:Devi
Lane 7	8		0		0	CC1
Lane 8	7		7	Linked with 0:1:0	7	Linked with 0:1:0
Lane 9	6		6		6	
Lane 10	5		5	[Segment:Bus:Devi	5	[Segment:Bus:Devi
Lane 11	4		4		4	
Lane 12	3		3		3	
Lane 13	2		2		2	
Lane 14	1		1		1	
Lane 15	0		0		0	

2.3.9. USB

Both USB 3.0 ports and USB 2.0 ports are available, where USB 3.0 ports are backwards compatible with the USB 2.0 specification.

The following table lists the supported USB features.

USB Ports	4x USB 3.0 (Including USB 2.0)
	4x USB 2.0
USB Over Current Signals	4x
USB Client Port	1x (optional for all COMe-types)

The following table lists the COMe connector port and PCH port USB 3.0 and USB 2.0 port combinations.

COMe Port	USB 3.0 (PCH Port)	USB 2.0 (PCH Port)	Comments
USB0	USB3_1	USB2_1	SuperSpeed USB 3.0 or USB 2.0
USB1	USB3_2	USB2_2	
USB2	USB3_3	USB2_3	
USB3	USB3_4	USB2_4	
USB4		USB2_5	USB 2.0 exclusive
USB5		USB2_6	
USB6		USB2_7	
USB7		USB2_8	

2.3.10. SATA

The SATA high-speed storage interface supports four SATA Gen3 ports with transfer rates of up to 6 Gb/s. The following SATA ports are available at the following COMe connector ports.

The following table lists the COMe connector port and PCH port SATA combinations.

COMe Port	PCH High- speed I/O Port #	PCH I/O Function	Comments
SATA0	19	SATA #0B	SATA Gen3, 6Gb/s
SATA1	20	SATA #1B	SATA Gen3, 6Gb/s
SATA2	21	SATA #2	SATA Gen3, 6Gb/s
SATA3	22	SATA #3	SATA Gen3, 6Gb/s

2.3.11. Ethernet

Ethernet connectivity is achieved via a single-port integrated physical layer (PHY) supporting Ethernet Media Dependent Interfaces [0-3]. One 10/100/1000 Mbit Ethernet LAN port is available on high-speed I/O port 11.

The following table lists the supported Ethernet features.

Ethernet	10 Base-T/100 Base-TX and 1000 Base-T
Ethernet Controller	Intel® i219LM

Additional features of the Ethernet controller are:

- Intel® vPRO™
- ► Energy Efficient Ethernet (IEEE 802.3az)
- ▶ Intel® SIPP Server Operating System Support
- Jumbo frames (up to 9 kB)
- Reduced power consumption during normal operation
- ▶ Integrated Intel® Auto Connect Battery Saver (ACBS)



If the LAN-Cable is disconnected, the ULP (Ultra Low Power) driver featured in Windows 10 can cause undefined LED behavior. To disable ULP use the "Intel ULPenable-Utility 1.3". For more information refer to the EMD Customer Section or contact Kontron Support.

2.3.12. COMe High-speed Serial Interfaces Overview

The following table provides an overview of the COMe connector's PCH high-speed serial interface ports.

COMe Port	PCH High- speed I/O Port #	USB 3.0	PCIe 3.0	SATA 3.0	LAN	Comments
SATA3	22			SATA#3		SATA Gen3 (6Gb/s)
SATA2	21			SATA #2		
SATA1	20			SATA #1B		
SATA0	19			SATA #0B		
PCIE3	18		PCIe #12			PCI Express lane [0-15]
PCIE2	17		PCIe #11			Also serves as an Intel®
PCIE1	16		PCIe #10			PCIe storage device #1
PCIE0	15		PCIe #9			
GBE-MDI	11				1 GbE	10/100/1000 Mbit Ethernet
PCIE7	10		PCIe #4			PCI Express lane [0-15]
PCIE6	9		PCIe #3			
PCIE5	8		PCIe #2			
PCIE4	7		PCIe #1			
USB3	4	USB3_4				SuperSpeed USB 3.0
USB3	3	USB3_3				
USB1	2	USB3_2				
USB0	1	USB3_1				

2.3.13. Storage Features

The following table lists the supported storage features.

Serial-ATA	4x SATA Gen3 6Gb/s	
SATA AHCI	NCQ, HotPlug, Staggered Spinup, eSATA, PortMulti	plier

2.3.14. BIOS/Software Features

The following table lists the supported BIOS and software features.

BIOS EFI	AMI Aptio V UEFI	
Software	KeAPI 3.0 for all supported OS	
	EFI Utilities to log and process module information	
	BIOS/EFI Flash utility for EFI Shell, Windows, Linux	
	BIOS/EFI utility for customers to implement Boot Logo	
Operating System (OS)	Windows 10 (64 bit)	
	Linux 64 bit + LiveCD	
	VxWorks 7.x (64 bit)	

2.3.15. COMe Features

The following table lists the supported COM ${\tt Express@}$ features.

SPI	Boot from an external SPI
LPC	Supported
UART	2x UART (RX/TX)
LID Signals	Supported
Sleep Signals	Supported
Audio	HD Audio for external HDA codecs
SMBus	Speed configurable, default 100 k SMB

2.3.16. Kontron Features

The following table lists the supported Kontron specific product features.

External I2C Bus	Fast I2C, Multimaster capable
Embedded API	KeAPI 3.0 for all supported OS
Customer BIOS Settings / Flash Backup	Supported
Watchdog Support	Dual staged
External SIO	Supported on the base board
GPIO	Start-up level configurable, GPI interrupt capable
Rapid Shutdown	Supported on dedicated variants

2.4. Electrical Specification

2.4.1. Power Supply Voltage Specifications

The COMe-bKL6 supports operation in both single power supply mode and ATX power supply mode.



Industrial temperature grade modules are validated for $12\ \mathrm{V}$ power supply only.

Commercial temperature grade modules support the wide range $8.5\ \mathrm{V}$ to $20\ \mathrm{V}$ power supply.

The following table lists the power supply specifications.

Supply Voltage Range (VCC)	8.5 V - 20 V
Supply Voltage (VCC)	12 V
Standby Voltage	5 V \pm 5% (5 VSB is not mandatory for operation)
RTC	2.8 V to 3.47 V

2.4.1.1. Power Supply Rise Time

The input voltage rise time is 0.1 ms to 20 ms from input voltage $\leq 10\%$ to nominal VCC. To comply with the ATX specification there must be a smooth and continuous ramp of each DC input voltage from 10% to 90% of the DC input voltage final set point.

2.4.1.2. Power Supply Voltage Ripple

The maximum power supply voltage ripple is 100 mV peak-to-peak at 0 MHz - 20 MHz.

2.4.2. Power Management

Power management options are available within the BIOS setup.

ACPI Settings	ACPI 5.0
Miscellaneous Power	Supported in BIOS setup menu
Management	

Within the BIOS setup, If VCC power is removed, 5 V $\pm 5\%$ can be applied to the V_5V_STBY pins to support the following suspend states:

- Suspend to RAM (S3)
- ► Suspend-to-disk / Hibernate (S4)
- ▶ Soft-off state (S5)

The Wake-up event (S0) requires VCC power as the board is running.

2.4.3. Power Supply Control Settings

The power supply control settings are set in the BIOS and enable the module to shut down, rest and wake from standby properly.

The following table lists the implemented power supply control settings.

Power Button (PWRBTN#)	Pin B12	To start the module using the power button, the PWRBTN# signal must be at least 50 ms (50 ms \leq t $<$ 4 s, typical 400 ms) at low level (Power Button Event). Pressing the power button for at least four seconds turns off power to the module (Power Button Override).
Power Good (PWR_OK)	Pin B24	PWR_OK is internally pulled up to 3.3 V and must be at the high level to power on the module. This can be driven low to hold the module from powering up as long as needed. The carrier needs to release the signal when ready. Low level prevents the module from entering the SO state. A falling edge during SO will cause a direct switch to S5 (Power Failure).
Reset Button (SYS_RESET#)	Pin B49	When the SYS_RESET# pin is detected active (falling edge triggered), it allows the processor to perform a "graceful" reset, by waiting up to 25 ms for the SMBus to go idle before forcing a reset, even though activity is still occurring. Once the reset is asserted, it remains asserted for 5 ms to 6 ms regardless of whether the SYS_RESET# input remains asserted or not.
SM-Bus Alert (SMB_ALERT#)	Pin B15	With an external battery manager present and SMB_ALERT #connected, the module always powers on even if the BIOS switch "After Power Fail" is set to "Stay Off".

2.4.4. Power Supply Modes

Setting the power supply controls enables the COMe-bKL6 to operating in either ATX power mode or in single power supply mode.

2.4.4.1. ATX Modes

To start the module in ATX mode and power VCC, follow the step below.

- 1. Connect the ATX PSU with VCC and 5 VSB, to set PWR OK to low and VCC to 0 $\rm V.$
- 2. Press the power button to set the PWR_OK to high and power VCC.

The PS_ON# signal generated by SUS_S3# (A15) indicates that the system is in the Suspend to RAM state. An inverted copy of SUS_S3# on the carrier board may be used to enable non-standby power on a typical ATX supply. The input voltage must always be higher than 5 V standby (VCC > 5 VSB) for Computer-On-Modules supporting a wide input voltage range down to 8.5 V.

The following table lists the ATX mode settings.

State	PWRBTN#	PWR_OK	V5_StdBy	PS_ON#	VCC
G3	Х	Х	0 V	х	0 V
S5	high	low	5 V	high	0 V
S5 → S0	PWRBTN Event	low → high	5 V	high→ low	0 V→ VCC
S0	high	high	5 V	low	VCC

 $\ensuremath{\boldsymbol{x}}$ - Signals are not relevant for the specific power state. It makes no difference if the signal is connected or open.

2.4.4.2. Single Supply Mode

In single supply mode, without 5 V standby, the module starts automatically if VCC power is connected and the Power Good input is open or at the high level (internal PU to 3.3 V).

PS_ON# is not used in single supply mode and the input voltage VCC range can be $8.5~\mathrm{V}$ to $20~\mathrm{V}$.

To power on the module from S5 state, press the power button or reconnect VCC. Suspend/Standby states are not supported in single supply mode.

The following table lists the single supply mode settings.

State	PWRBTN#	PWR_OK	V5_StdBy	VCC
G3	x / 0 V	x / 0 V	x / 0 V	0 V
G3 → S0	high	open / high	open	connecting VCC
S5	high	open / high	open	VCC
S5 → S0	PWRBTN Event	open / high	open	reconnecting VCC

X-Signals are not relevant for the specific power state. It makes no difference if the signal is connected or open.



All ground pins must be connected to the carrier board's ground plane.

2.5. Thermal Management

2.5.1. Heatspreader and Active or Passive Cooling Solutions

A heatspreader plate assembly is available from Kontron for the COMe-bKL6. The heatspreader plate assembly is NOT a heat sink. The heatspreader works as a COM Express® standard thermal interface to be use with a heat sink or external cooling devices.

External cooling must be provided to maintain the heatspreader plate at proper operating temperatures. Under worst-case conditions, the cooling mechanism must maintain an ambient air and heatspreader plate temperature on any spot of the heatspreader's surface according to the module's specifications:

- ▶ 60°C for commercial temperature grade modules
- > 75°C for extended temperature grade modules (E1)
- ▶ 85°C for industrial temperature grade modules by screening (E2S)

2.5.2. Active or Passive Cooling Solutions

Both active and passive thermal management approaches can be used with heatspreader plates. The optimum cooling solution varies, depending on the COM Express® application and environmental conditions. Active or passive cooling solutions provided from Kontron for the COMe-bKL6 are usually designed to cover the power and thermal dissipation for a commercial temperature range used in housing with proper airflow. For more information concerning possible cooling solutions, see Chapter 2.2 Accessories.

2.5.3. Operating with Kontron Heatspreader Plate (HSP) Assembly The operating temperature defines two requirements:

- Maximum ambient temperature with ambient being the air surrounding the module
- Maximum measurable temperature on any spot on the heatspreader's surface

The heatspreader is tested for the temperature specifications listed in the table below.

Table 9: Heatspreader Test Temperature Specifications

Temperature Specification	Validation Requirements
Commercial Grade	at 60°C HSP temperature the CPU @ 100% load needs to run at nominal frequency
Extended Grade (E1)	at 75°C HSP temperature the CPU @ 75% load is allowed to start speedstepping for thermal protection
Industrial Grade by screening (E2S)	at 85°C HSP temperature the CPU @ 50% load is allowed to start throttling for thermal protection

2.5.4. Operating without Kontron Heatspreader Plate (HSP) Assembly

The operating temperature is the maximum measurable temperature on any spot on the module's surface.

2.5.5. On Board Fan Connector

The module's 3-pin fan connector powers, controls and monitors a fan for chassis ventilation.

Table 10: 3-Pin Fan Connector Pin Assignment

Pin	Signal	Description	Type
1	Fan_Tach_IN#	Input voltage	I
2	V_FAN	Limited to a max. 12 V ($\pm 10\%$) across the whole input range	PWR
3	GND	Power GND	PWR

To connect a standard 3-pin connector fan to the module, use one of the following adaptor cables:

- ► KAB-HSP 200 mm (PN 96079-0000-00-0)
- ► KAB-HSP 40 mm (PN 96079-0000-00-2)

If the input voltage is below 13 V, the maximum supply current to the on-board fan connector is 350 mA. The maximum supply current is limited to 150 mA if the input voltage is between 13 V and 20 V.



Always check the fan specification according to the limitations of the supply current and supply voltage.

Table 11: Electrical Characteristics of the Fan Connector

Module Input Voltage	< 13 V	13 V to 20 V
FAN Output Voltage	8.5 V to 13 V	12 V (± 10%)
FAN Output Current	350 mA max.	150 mA

2.6. Environmental Specification

2.6.1. Temperature

Kontron defines the following temperature grades for Computer-On-Modules. For more information on the available temperature grades for the COMe-bKL6, see Chapter 2.1 Module Variants.

Table 12: Temperature Grade Specifications

Temperature Grades	Operating	Non-operating / Storage
Commercial Grade	0°C to +60°C	-30°C to +85°C
Extended Grade E1	-25°C to +75°C	-30°C to +85°C
(custom)		
Industrial Grade R E2S	-40°C to +85°C	-40°C to +85°C
(by screening)		

2.6.2. Humidity

Table 13: Humidity Specification

Humidity	
Relative Humidity	93% at 40°C non-condensing (according to IEC 60068-2-78)

2.7. Standards and Certifications

The COMe-bKL6 complies with the following standards and certifications. For more information, contact Kontron Support.

Table 14: Standards and Certification Compliance

Emission	EN 55022: Class B
(EMC)	Information technology equipment - Radio disturbance characteristics- Limits and methods of measurement
	IEC /EN 61000-6-3
	Electromagnetic compatibility (EMC) - Part 6-3: Generic Standards-
	Emission standard for residential, commercial and light-industrial
	environments
	IEC/ EN 61000-3-2
	Harmonic current emissions
	nathonic current emissions
	IEC / EN 61000-3-3
	Voltage changes, voltage fluctuations and flicker
Immunity	IEC / EN 61000-6-2
(EMI)	Electromagnetic compatibility (EMC) - Part 6-2: Generic standards -
	Immunity for industrial environments
	Immunity tests:
	IEC / EN 61000-4-2 - Electrostatic discharge (ESD) immunity
	IEC / EN 61000-4-3 - Radiated, radio frequency, electromagnetic field
	immunity
	IEC / EN 61000-4-4 - Electrical fast transient/burst immunity
	IEC / EN 61000-4-5 - Surge immunity
	IEC / EN 61000-4-6 - Immunity to conducted disturbances, induced by radio frequency fields
	IEC / EN 61000-4-8 - Power frequency magnetic field Immunity
	IEC / EN 61000-4-11 - Voltage dips, short interruptions, and voltage
	variation immunity
Safety	EN 62368-1
	Safety for audio/video and information technology equipment
	UL 60950-1 / CSA 60950-1
	Information Technology Equipment Including Electrical Business Equipment
	NWGQ2.E304278
	NWGQ8.E304278
Shock	IEC / EN 60068-2-27
	Non-operating shock - (half-sinusoidal, 11 ms, 15 g)
Vibration	IEC / EN 60068-2-6
	Non-operating vibration - (sinusoidal, 10 Hz - 4000 Hz, +/- 0.15
	mm, 2 g)
(RoHS II)	Compliant with the directive on the restriction of the use of certain
	hazardous substances in electrical and electronic equipment.

2.7.1. MTBF

The MTBF (Mean Time Before Failure) values were calculated using a combination of the manufacturer's test data, (if available) and the Telcordia (Bellcore) issue 2 calculation for the remaining parts.

The Telcordia calculation used is "Method 1 Case 3" in a ground benign, controlled environment. This particular method takes into account varying temperature and stress data and the system is assumed to have not been burned-in. Other environmental stresses (such as extreme altitude, vibration, salt-water exposure) lower MTBF values.

Table 15: MTBF Estimated Values

MTBF

System MTBF(hours) = 598847 @ 40°C for the COMe-bKL6 i3-7102E CM238 Reliability report article number: 38032-0000-21-3

System MTBF(hours) = 542327 @ 40 °C for the COMe-bKL6 E2S E3-1505M CM238 Reliability report article number: 38033-0000-30-4



Fans usually shipped with Kontron's modules have a 50,000 hour typical operating life. The MTBF estimated values above assumes no fan, but a passive heat sinking arrangement. Estimated RTC battery life (as opposed to battery failures) is not accounted for and needs to be considered separately. Battery life depends on both temperature and operating conditions. When the module is connected to an external power source, the only battery drain is from leakage paths.

Figure 2 and Figure 3 show the MTBF de-rating values for module used in the E1 (-25° C to $+75^{\circ}$ C) temperature range in an office or telecommunications environment. Other environmental stresses (extreme altitude, vibration, salt-water exposure, etc.) lower MTBF values.

Figure 2: MTBF De-rating Values @ 40° C for the COMe-bKL6 i3-7102E CM238 (MTBF: 598847 hours)


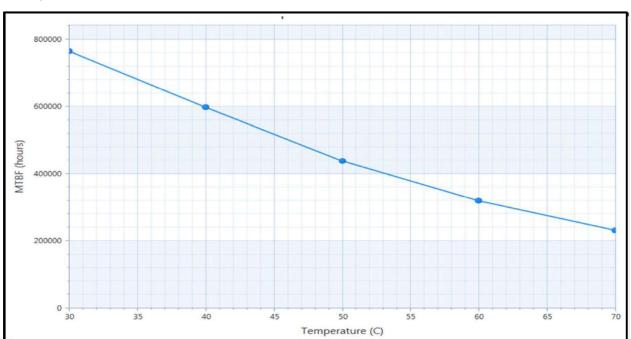


Figure 3: MTBF De-rating Values @ $40\,^{\circ}$ C for the COMe-bKL6 E2S E3-1505M CM238 (MTBF: 542327 hours)

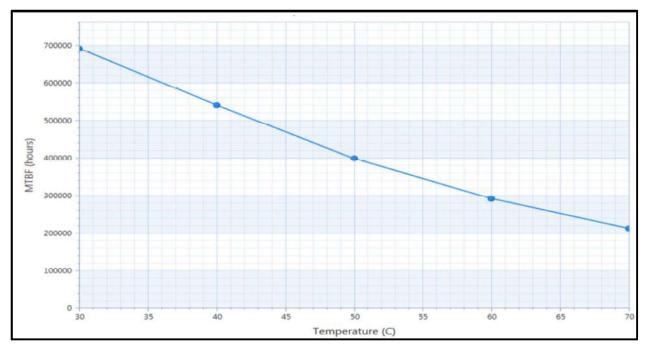


2.8. Mechanical Specification

2.8.1. Dimensions

The modules dimensions are:

> 95 mm x 125 mm (3.75 " x 4.92 ")

Figure 4: Module Dimensions

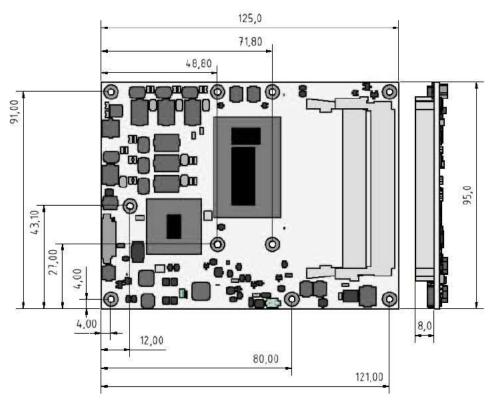


*All dimensions shown in mm.

2.8.2. Height

The height of the module depends on the height of the implemented cooling solution. The height of the cooling solution is not specified in the COM Express® specification.

The COM Express® specification defines a module height of approximately 13 mm from module PCB bottom to heatspreader top, as shown in Figure 5: Module Height below.

Figure 5: Module Height

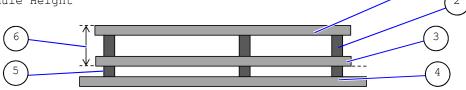


- 1. Heatspreader
- 2. Heatspreaader standoff(s)
- 3. Module PCB

- 4. Carrier Board PCB
- 5. Connector standoff(s) 5 mm or 8 mm
- 6. 13 mm +/- 0.65 mm

2.8.3. Heatspreader Dimensions

The following figure shows the heatspreader's dimensions and location on the module.

Figure 6: Heatspreader Location and Dimensions

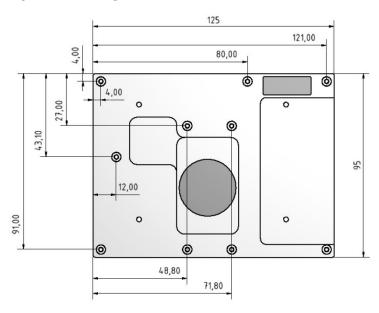

*All dimensions shown in mm.

3/Features and Interfaces

3.1. Fast I2C

Fast I2C supports transfer between components on the same board. The COMe-bKL6 features an onboard I2C controller connected to the LPC Bus. The I2C controller supports:

- Multimaster transfers
- Clock stretching
- Collision detection
- Interruption on completion of an operation

3.2. GPIO

The eight GPIO pins support four inputs pins (A54 for GPIO, A63 for GPI1, A67 for GPI2 and A85 for GPI3) and four output pins (A93 for GPO0, B54 for GPO1, B57 for GPO2 and B63 for GPO3) by default. The four GPI [0-3] pins are pulled high with a pull-up resistor (e.g. 100 K ohms) and the four GPO [0-3] pins are pulled low with a pull-down resistor (e.g. 100 K ohms) on the module.

To change the default GPIO signal-state users are required to make BIOS and/or OS-driver changes, and additional hardware changes by adding external termination resistors on the carrier board to override the weak on-module pull-up resistors with a lower resistance pull-down (e.g. 10 K ohms), or pull-down resistors with a lower resistance pull-up (e.g. 10 K ohms).

3.3. Intel® Optane™ Memory

Intel® Optane™ memory is a system accelerator for 7th Gen Intel® Core™ processors. Intel® Optane™ memory combines the non-volatile 3D XPoint™ memory with advanced system controllers, and interface and software enhancements to provide a caching solution for accelerating systems with high capacity workloads.

Intel® Optane m is available on the Rapid Storage capable PCIe Ports PCIE [0-3] and supports the x2 and x4 configuration options only. Owing to the fact that the PCIE [0-3] are configured as four times x1, Intel® Optane m is only possible with a custom BIOS.

3.4. Kontron Security Solution (optional)

Kontron Security Solution is a combined hardware and software solution that includes an embedded hardware security module and a software framework to provide full protection for your application.

The optional integrated security module connects to USB2 port 9, supporting the following features:

- Copy protection
- ▶ IP protection
- License model enforcement

If required, customers can customize the solution to meet specific needs. For more information, contact Kontron Support.

3.5. LPC

The Low Pin Count (LPC) Interface signals are connected to the LPC Bus bridge located in the CPU or chipset. The LPC low speed interface can be used for peripheral circuits such as an external Super I/O Controller that typically combines legacy-device support into a single IC. The implementation of this subsystem complies with the COM Express® specification. The COM Express® Design Guide maintained by PICMG provides implementation information or refer to the official PICMG documentation for more information.

The LPC bus does not support DMA (Direct Memory Access). When more than one device is used on LPC, a zero delay clock buffer is required. This leads to limitations for ISA bus and SIO (standard I/O(s) like floppy or LPT interfaces) implementations.

All Kontron COM Express® Computer-on-Modules imply BIOS support for the following external baseboard LPC Super I/O controller features for the Winbond/Nuvoton 83627DHG-P.

Table 16: Supported BIOS Features

3.3V 83627DHG-P	AMI EFI APTIO V
PS/2	Not supported
COM1/COM2	Supported
LPT	Not supported
HWM	Not supported
Floppy	Not supported
GPIO	Not supported

Features marked as not supported do not exclude OS support (e.g., HWM is accessible via SMB). If any other LPC Super I/O additional BIOS implementations are necessary, contact Kontron Support.

3.6. Rapid Shutdown

The rapid shutdown functions are no more supported.

Please refer the PCN BKLV190 for details.

3.7. Real Time Clock (RTC)

The RTC keeps track of the current time accurately. The RTC's low power consumption means that the RTC can be powered from an alternate source of power enabling the RTC to continue to keep time while the primary source of power is off or unavailable.

The RTC battery voltage range is 2.8 V - 3.47 V. A typical RTC voltage is 3 V with a current of >10 μ A if the module is powered by the mains supply the RTC voltage is generated by on-module regulators to reduce RTC current draw.

3.8. Serial Peripheral Interface (SPI)

The Serial Peripheral Interface Bus (SPI bus) is a synchronous serial data link standard. Devices communicate in master/slave mode, where the master device initiates the data frame. Multiple slave devices are allowed with individual slave select (chip select) lines. SPI is sometimes called a four-wire serial bus, contrasting with three, two and one-wire serial buses.



The SPI interface can only be used with a SPI flash device to boot from the external BIOS on the baseboard.

3.8.1. SPI boot

The COMe-bKL6 supports boot from a 16 MB, 3 V serial external SPI Flash. Pin A34 (BIOS DISO#) and pin B88 (BIOS DIS1#) configure the SPI Flash as follows:

Table 17: SPI Boot Pin Configuration

Configuration	BIOS_DISO#	BIOS_DIS1#	Function
1	open	open	Boot on module BIOS
2	GND	open	Not supported
3	open	GND	Boot on baseboard SPI
4	GND	GND	Not supported



BIOS does not support being split between two chips. Booting takes place either from the module SPI or from the baseboard SPI.

Table 18: Supported SPI Boot Flash Types for 8-SOIC Package

Size	Manufacturer	Part Number	Device ID
16MB	Maxim	MX25L12835F	0x20
16MB	Winbond	W25Q128FV	0x40
16MB	Micron	N25Q128A	0xBA

3.8.2. Using an External SPI Flash

Initially, boot on the EFI Shell with an USB key containing the binary used to flash the SPI, plugged in on the system.

Depending on which SPI you would like to flash, you will need to use the (BIOS_DIS1#) jumper located on the COM Express® carrier.

To flash the carrier or module Flash chip:

- 1. Connect a SPI flash with the correct size (similar to BIOS binary (*.BIN) file size) to the carrier SPI interface.
- ${\bf 2.}$ Open pin A34 (BIOS_DISO#) and pin B88 (BIOS_DIS1#) to boot from the module BIOS.
- 3. Turn on the system and make sure your USB is connected then start the setup.
- 4. Check that the following entries are set to their default setting:

Advanced > PCH FW Configuration > Firmware update configuration > ME FW Image Re-Flash > Disabled

 ${\tt Advanced} \, > \, {\tt PCH} \,\, {\tt FW} \,\, {\tt Configuration} \, > \, {\tt Firmware} \,\, {\tt update} \,\, {\tt configuration} \, > \, {\tt Local} \,\, {\tt FW} \,\, {\tt Update} \,\, > \,\, {\tt Enabled}$

Then, change the setup option:

Chipset > PCH-IO Configuration > BIOS Security Configuration > BIOS Lock > Disabled

5. Save and exit setup.

- 6. Reboot system into EFI shell.
- 7. Connect pin B88 (BIOS DIS1#) to ground to enable the external SPI flash.
- 8. From the EFI shell, enter the name of the partition of your USB Key in this example; Hit FSO: then enter.
- 9. Type FPT -SAVEMAC -F <biosname.BIN>
- 10. Wait until the program ends properly and then power cycle the whole system.

The system is now updated.



Depending on the state of the external SPI flash, the program may display up to two warning messages printed in red. Do not stop the process at this point! After a few seconds of timeout, flashing proceeds. For more information, refer to the EMD Customer Section.

3.8.3. External SPI flash on Modules with Intel® ME

If booting from the external (baseboard mounted) SPI flash then exchanging the COM Express® module for another module of the same type will cause the Intel® Management Engine (ME) to fail during the next start. This is due to the design of the ME that bounds itself to every module the ME was flashed to previously. In the case of an external SPI flash, this is the module present at flash time.

To avoid this issue, conduct a complete flash of the external SPI flash device after changing the COM Express® module for another module. If disconnecting and reconnecting the same module again, this step is not necessary.

3.9. SpeedStep® Technology

SpeedStep® technology enables you to adapt high performance computing to your applications by switching automatically between maximum performance mode and battery-optimized mode, depending on the needs of the application. When powered by a battery or running in idle mode, the processor drops to lower frequencies (by changing the CPU ratios) and voltage, thus conserving battery life while maintaining a high level of performance. The frequency is automatically set back to the high frequency, allowing you to customize performance.

In order to use the Intel® Enhanced SpeedStep® technology the operating system must support SpeedStep \$ technology.

By deactivating the SpeedStep® feature in the BIOS, manual control or modification of the CPU performance is possible. Setup the CPU Performance State in the BIOS Setup or use third party software to control the CPU Performance States.

3.10. Trusted Platform Module (TPM 2.0)

A Trusted Platform Module (TPM) stores RSA encryption keys specific to the host system for hardware authentication. The term TPM refers to the set of specifications applicable to TPM chips. The LPC bus connects the TPM chip to the CPU.

Each TPM chip contains an RSA key pair called the Endorsement Key (EK). The pair is maintained inside the chip and cannot be accessed by software. The Storage Root Key (SRK) is created when a user or administrator takes ownership of the system. This key pair is generated by the TPM based on the Endorsement Key and an owner-specified password.

A second key, called an Attestation Identity Key (AIK) protects the device against unauthorized firmware and software modification by hashing critical sections of firmware and software before they are executed. When the system attempts to connect to the network, the hashes are sent to a server that verifies that they match the expected values. If any of the hashed components have been modified since the last started, the match fails, and the system cannot gain entry to the network.

3.11. UART

The UART implements an interface for serial communications and supports up to two serial RX/TX ports defined in the COM Express® specification on pin A98 (SERO_TX) and pin A99 (SERO RX) for UARTO, and pin A101 (SER1 TX) and pin A102 (SER1 RX) for UART1.

The UART controller is fully 16550A compatible. UART features are:

- ▶ On-Chip bit rate (baud rate) generator
- No handshake lines
- Interrupt function to the host
- FIFO buffer for incoming and outgoing data

3.12. Watchdog Timer (WTD) - Dual Stage

A watchdog timer or (computer operating properly (COP) timer) is a computer hardware or software timer. If there is a fault condition in the main program, the watchdog triggers a system reset or other corrective actions. The intention is to bring the system back from the non-responsive state to normal operation.

Possible fault conditions are a hang, or neglecting to service the watchdog regularly. Such as writing a "service pulse" to it, also referred to as "kicking the dog", "petting the dog", "feeding the watchdog" or "triggering the watchdog".

The COMe-bKL6 offers a watchdog that works with two stages that can be programmed independently and used stage by stage.

Table 19: Dual Stage Watchdog Timer- Time-out Events

0000b	No action	The stage is off and will be skipped.
0001b	Reset	A reset restarts the module and starts a new POST and operating system.
0010b	NMI	A non-maskable interrupt (NMI) is a computer processor interrupt that cannot be ignored by standard interrupt masking techniques in the system. It is used typically to signal attention for non-recoverable hardware errors.
0011b	SMI	A system management interrupt (SMI) makes the processor entering the system management mode (SMM). As such, specific BIOS code handles the interrupt. The current BIOS handler for

		the watchdog SMI currently does nothing. For special requirements, contact Kontron Support.
0100b	SCI	A system control interrupt (SCI) is a OS-visible interrupt to be handled by the OS using AML code.
0101b	Delay -> No action*	Might be necessary when an operating system must be started and the time for the first trigger pulse must be extended. Only available in the first stage.
1000b	WDT Only	This setting triggers the WDT pin on the baseboard connector (COM Express® pin B27) only.
1001b	Reset + WDT	
1010b	NMI + WDT	
1011b	SMI + WDT	
1100b	SCI + WDT	
1101b	DELAY + WDT -> No action*	

3.12.1. WDT Signal

Watchdog time-out event (pin B27) on the COM Express® connector offers a signal that can be asserted when a watchdog timer has not been triggered within a set time. The WDT signal is configurable to either of the two stages. After reset, the signal is automatically deasserted. If deassertion is necessary during runtime, contact Kontron Support for further help.

4/System Resources

4.1. Interrupt Request (IRQ) Lines

The following table specifies the device connected to each Interrupt line or if the line is available for new devices.

Table 20: Interrupt Requests

IRQ	General Usage	Project Usage
0	Timer	Timer
1	Keyboard	Keyboard (SuperIO)
2	Redirected secondary PIC	Redirected secondary PIC
3	COM2	COM2
4	COM1	COM1
5	LPT2/PCI devices	One of COM3+4
6	FDD	One of COM3+4 or not used
7	LPT1	LPT1 or one of COM3+4
8	RTC	RTC
9	SCI / PCI devices	Free for PCI devices
10	PCI devices	Free for PCI devices
11	PCI devices	Free for PCI devices
12	PS/2 mouse	Free for PCI devices
13	FPU	FPU
14	IDE0	Not used
15	IDE1	Not used

4.2. Memory Area

The following table specifies the usage of the address ranges within the memory area.

Table 21: Designated Memory Locations

Address Range (hex)	Size	Project Usage
00000000-0009FBFF	639 KB	Real mode memory
0009FC00-0009FFFF	1 KB	Extended BDA
000A0000-000BFFFF	128 KB	Display memory (legacy)
000C0000-000CBFFF	48 KB	VGA BIOS (legacy)
000CC000-000DFFFF	80 KB	Option ROM or XMS (legacy)
000E0000-000EFFFF	64 KB	System BIOS extended space (legacy)
000F0000-000FFFFF	64 KB	System BIOS base segment (legacy)
00100000-7FFFFFF	128 MB	System memory (Low DRAM)
80000000-FFF00000	2 GB - 1 MB	PCI memory, other extensions (Low MMIO)
FEC00000-FEC00FFF	4 KB	IOXAPIC
FED00000-FED003FF	1 KB	HPET (Timer)
FED40000-FED40FFF	4KB	Always reserved for LPC TPM usage
FEE00000-FEEFFFF	1MB	Local APIC region
FFFC0000-FFFFFFF	256 KB	Mapping space for BIOS ROM/Boot vector
100000000-17FFFFFF	2 GB	System memory (High DRAM)
180000000-F00000000	58 GB	High MMIO

4.3. I/O Address Map

The I/O port addresses are functionally identical to a standard PC/AT. All addresses not mentioned in this table should be available. We recommend that you do not use I/O addresses below 0100h with additional hardware for compatibility reasons, even if the I/O address is available.

Table 22: Designated I/O Port Address Ranges

I/O Address	General Usage	Project Usage
Range		
000-00F	DMA-Controller (Master) (8237)	DMA-Controller (Master) (8237)
020-021	Interrupt-Controller (Master) (8259)	Interrupt-Controller (Master) (8259)
024-025		
028-029 02C-02D		
030-031		
034-035		
038-039		
03C-03D		
02E-02F	SuperIO (Winbond)	External SuperIO (Winbond)
040-043	Programmable Interrupt Timer (8253)	Programmable Interrupt Timer (8253)
050-053		
04E-04F	2 nd SuperIO, TPM etc.	TPM
060, 064	KBD Interface-Controller (8042)	KBD Interface-Controller (8042)
061, 063	NMI Controller	NMI Controller
065, 067		
062, 066	Embedded Microcontroller	Not used
070-071	RTC CMOS / NMI mask	RTC CMOS / NMI mask
072-073	RTC Extended CMOS	RTC Extended CMOS
080-083	Debug port	Debug port
0A0-0A1	Interrupt-Controller (Slave) (8259)	Interrupt-Controller (Slave) (8259)
0A4-0A5		
0A8-0A9		
OAC-OAD		
0B0-0B1 0B4-0B5		
0B4-0B3 0B8-0B9		
OBC-OBD		
0B2-0B3	APM control	APM control
0C0-0DF	DMA-Controller (Slave) (8237) (N/A)	Not used
OF0-OFF	FPU (N/A)	Not used
170-177	HDD-Controller IDE1 Master	Not used
1F0-1F7	HDD-Controller IDEO Master	Not used
200-207	Gameport	Not used
220-22F	Soundblaster®	Not used
279	ISA PnP	ISA PnP
278-27F	Parallel port LPT2	Not used
295-296	Hardware monitor (Winbond default)	Reserved (If SuperIO present)
2B0-2BF	EGA	Not used
2D0-2DF	EGA	Not used
2E8-2EF	Serial port COM 4	Serial port COM4 (optional)
2F8-2FF	Serial port COM 2	Serial port COM2 from CPLD

I/O Address Range	General Usage	Project Usage
300-301	MIDI	Not used
300-31F	System specific peripherals	Not used
370-377	Floppy disk controller	Not used
376-377	HDD-Controller IDE1 Slave	Not used
378-37F	Parallel port LPT 1	LPT1 (If SuperIO present)
3BC-3BF	Parallel port LPT3	Not used
3C0-3CF	VGA/EGA	VGA/EGA
3D0-3DF	CGA	Not used
3E0-3E1	PCMCIA ExCA interface	Not used
3E8-3EF	Serial port COM3	Serial port COM3 (optional)
3F0-3F7	Floppy Disk Controller	Not used
3F6-3F7	HDD controller IDEO Slave	Not used
3F8-3FF	Serial Port COM1	Serial port COM1
4D0-4D1	Interrupt-Controller (Slave)	Interrupt-Controller (Slave)
A80-A81	Kontron CPLD	Kontron CPLD control port
CF8	PCI configuration address	PCI configuration address
CF9	Reset control	Reset control
CFC-CFF	PCI configuration data	PCI configuration data



Other PCI device I/O addresses are allocated dynamically and not listed here. For more information on how to determine I/O address usage, refer to the OS documentation.

4.4. Peripheral Component Interconnect (PCI) Devices

All devices follow the Peripheral Component Interconnect 2.3 (PCI 2.3) and PCI Express Base 1.0a specification. The BIOS and Operating Software (OS) control the memory and I/O resources. For more information, refer to the PCI 2.3 specification.

4.5. I2C Bus

The following table provides the I2C address for devices connected the I2C Bus.

Table 23: I2C Bus Port Addresses

I2C Address	Used For	Available	Comment
58h		No	Internally reserved
A0h	JIDA-EEPROM	No	Module EEPROM
AEh	FRU-EEPROM	No	Recommended for Baseboard EEPROM

4.6. System Management (SM) Bus

The 8-bit SMBus address uses the LSB (Bit 0) for the direction of the device.

- ▶ Bit0 = 0 defines the write address
- Bit0 = 1 defines the read address

The 8-bit address listed below shows the write address for all devices. The 7-bit SMB us address shows the device address without Bit0.

Table 24: SMBus Addresses


8-bit	7-bit	Device	Comment	SMBus
Address	Address			
5Ch	2Eh	HWM NCT7802Y	Do not use under any circumstances	SMB
A0h	50h	SPD DDR Channel 1 (SO-DIMM)		SMB
A4h	52h	SPD DDR Channel 2 (SO-DIMM)		SMB
30h	18h	SO-DIMM Thermal Sensor	If available on the used memory-module	SMB
34h	1Ah	SO-DIMM Thermal Sensor channel 2	If available on the used memory-module	SMB

5/COMe Interface Connectors

The COMe-bKL6 is a COM Express® basic module containing two 220-pin connectors; each with two rows called row A & row B on the primary connector and row C & row D on the secondary connector.

The following figure is a view from the bottom of the module showing the position of interface connectors X1A and X1B.

Figure 7: X1A and X1B COMe Interface Connectors.

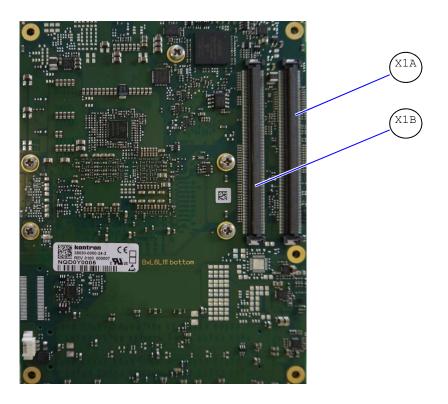

5.1. X1A and X1B Signals

For description of the terms used within the pin assignment tables, see the General Signals Description table below or Appendix A, List of Acronyms. If a more detailed pin assignment description is required, refer to the PICMG specification COMe Rev 2.1 Type 6 standard.



The information provided under type, module terminations and comments is complimentary to the COM.0 Rev 2.1 Type 6 standard. For more information, contact Kontron Support.

Table 25: General Signal Description

Type	Description	Type	Description
NC	Not Connected (on this product)	0-1,8	1.8 V Output
1/0-3,3	Bi-directional 3.3 V I/O- Signal	0-3,3	3.3 V Output
I/O-5T	Bi-dir. 3.3 V I/O (5 V Tolerance)	0-5	5 V Output
I/O-5	Bi-directional 5V I/O-Signal	DP-I/O	Differential Pair Input/Output
I-3,3	3.3 V Input	DP-I	Differential Pair Input
I/OD	Bi-directional Input/Output Open Drain	DP-O	Differential Pair Output
I-5T	3.3 V Input (5 V Tolerance)	PU	Pull-Up Resistor
OA	Output Analog	PWR	Power Connection
OD	Output Open Drain	+ and -	Differential Pair

NOTICE

To protect external power lines of peripheral devices, make sure that the wires have the right diameter to withstand the maximum available current.

The enclosure of the peripheral device fulfills the fire-protection requirements of IEC/EN60950.

5.2. X1A and X1B Pin Assignment

For more information regarding the pin assignment of connector X1A (row A and row B) and connector X1B (row C and row D), see the pin assignment tables:

- Table 26: Connector X1A Row A Pin Assignment (A1-A110)
- Table 27: Connector X1A Row B Pin Assignment (B1-B110)
- ▶ Table 28: Connector X1B Row C Pin Assignment (C1-C110)
- Table 29: Connector X1B Row D Pin Assignment (D1-D110)

5.2.1. Connector X1A Row A1 - A110

Table 26: Connector X1A Row A Pin Assignment (A1-A110)

Pi n	COMe Signal	Description	Туре	Terminati on	Comment
A1	CND	Payer ground	PWR GND	OII	
A2	GND	Power ground Ethernet media dependent interface 3	DP-I/O		
A3	GBE0_MDI3- GBE0 MDI3+	Ethernet media dependent interface 3	DP=1/0		
A4	GBE0_MD13+ GBE0_LINK100#	Ethernet speed indicator	OD		
A5	_	Ethernet speed indicator	OD		
A6	GBEO_LINK1000#	Ethornot modia dependent Interface 2	DP-I/O		
A7	GBEO_MDI2-	Ethernet media dependent Interface 2	DF=1/0		
A8	GBEO_MDI2+	Ethernet link indicator	OD		
A9	GBE0_LINK# GBE0 MDI1-	Ethernet media dependent interface 1	DP-I/O		
A10	_	Ethernet media dependent interface i	DI 1/0		
A11	GBE0_MDI1+	Payer ground	PWR GND		
A11		Power ground Ethernet media dependent interface 0	DP-I/O		
A13	GBE0_MDI0- GBE0 MDI0+	Ethernet media dependent interface o	DF-1/O		
A14	GBEO_CTREF	Reference voltage for Carrier Board Ethernet magnetics center tab. The reference voltage is determined by the requirements of the module PHY and may be as low as OV and as high as 3.3V.	0		1 uF capacitor to GND
A15	SUS_S3#	Indicates system is in Suspend to RAM (or deeper) state. An inverted copy of SUS_S3# on Carrier Board may be used to enable non-standby power on a typical ATX supply.	0-3.3	PD 10 kΩ	
A16	SATAO_TX+	Serial ATA transmit data pair 0	DP-O		
A17	SATAO_TX-				
A18	SUS_S4#	Indicates system is in Suspend to Disk (or deeper) state.	0-3.3	PD 10 kΩ	
A19	SATAO_RX+	Serial ATA receive data pair 0	DP-I		
A20	SATAO_RX-				
A21	GND	Power ground	PWR GND		
A22	SATA2_TX+	Serial ATA transmit data pair 2	DP-O		
A23	SATA2_TX-				
A24	SUS_S5#	Indicates system is in Soft Off state.	0-3.3		
A25	SATA2_RX+	Serial ATA receive data pair 2	DP-I		
A26	SATA2_RX-				
A27	BATLOW#	Provides a battery-low signal to the module to indicate external battery is low	I-3.3	PU 10 kΩ, 3.3 V (S5)	Assertion prevents wake from S3-S5 state
A28	ATA_ACT#	Serial ATA activity LED indicator	OD-3.3	PU 10 kΩ, 3.3 V (S0)	Can sink 15 mA
A29	HDA_SYNC	HD audio sync	0-3.3	PD 20 kΩ in PCH	
A30	HDA_RST#	HD audio reset	0-3.3	PD 20 kΩ in PCH	
A31	GND	Power ground	PWR GND		
A32	HDA_CLK	HD audio bit clock output	0-3.3	PD 20 kΩ in PCH	
A33	HDA_SDOUT	HD audio serial data out	0-3.3	PD 20 kΩ in PCH	
A34	BIOS_DISO#	BIOS selection straps to determine the BIOS boot device	I-3.3	PU 10 kΩ,3.3 V (S5)	The Carrier should only float these or pull them low.
A35	THRMTRIP#	Thermal trip Indicates CPU has entered thermal shutdown	0-3.3	PU 10 kΩ, 3.3 V (S0)	Thermal trip event transition to S5 indicator

Pi n	COMe Signal	Description	Type	Terminati on	Comment
A36	USB6-	USB 2.0 data differential pair port 6	DP-I/O	PD 14.25 kΩ	
A37	USB6+	_	·	to 24.8 kΩ in PCH	
A38	USB_6_7_OC#	USB overcurrent indicator port 6/7	I-3.3	PU 10 kΩ, 3.3 V (S5)	
A39	USB4-	USB 2.0 data differential pair port 4	DP-I/O	PD 14.25 kΩ	
A40	USB4+	-		to 24.8 kΩ in PCH	
A41	GND	Power ground	PWR GND		
A42	USB2-	USB 2.0 data differential pair port 2	DP-I/O	PD 14.25 kΩ	
A43	USB2+			to 24.8 $k\Omega$ in PCH	
A44	USB_2_3_OC#	USB overcurrent indicator port 2/3	I-3.3	PU 10 kΩ 3.3 V (S5)	An open drain driver from a USB current monitor on the Carrier Board may drive this line low. Do not pull this line high on the Carrier Board.
A45	USB0-	USB 2.0 data differential pairs port 0	DP-I/O	PD 14.25 kΩ	
A46	USB0+	_	·	to 24.8 kΩ in PCH	
A47	VCC_RTC	Real Time Clock (RTC) circuit power input	PWR 3V		Voltage 2.8 V to 3.47 V
A48	EXCD0_PERST#	ExpressCard reset port 0	0-3.3	PD 10 kΩ	
A49	EXCD0_CPPE#	ExpressCard capable card request port 0	I-3.3	PU 10 kΩ 3.3 V (S0)	
A50	LPC_SERIRQ	Serial interrupt request	I/OD- 3.3	PU 8.2 kΩ,3.3 V (S0)	
A51	GND	Power ground	PWR GND		
A52	PCIE_TX5+	PCI Express transmit lane 5	DP-O		
A53	PCIE_TX5-				
A54	GPI0	General purpose input 0	I-3.3	PU 100 kΩ, 3.3 V (S0)	
A55	PCIE_TX4+	PCI Express transmit lane 4	DP-O		
A56		rei Express cransmit tame 4	DF-0		
1	PCIE_TX4-	rer express transmit rame 4	DF-0		
A57	PCIE_TX4-	Power ground	PWR GND		
	_				
A57	GND	Power ground	PWR GND		
A57 A58	GND PCIE_TX3+	Power ground	PWR GND		
A57 A58 A59	GND PCIE_TX3+ PCIE_TX3-	Power ground PCI Express transmit lane 3	PWR GND		
A57 A58 A59 A60	GND PCIE_TX3+ PCIE_TX3- GND	Power ground PCI Express transmit lane 3 Power Ground	PWR GND DP-O PWR GND		
A57 A58 A59 A60 A61	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+	Power ground PCI Express transmit lane 3 Power Ground	PWR GND DP-O PWR GND	PU 100 kΩ, 3.3 V (S0)	
A57 A58 A59 A60 A61 A62	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2-	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2	PWR GND DP-O PWR GND DP-O		
A57 A58 A59 A60 A61 A62 A63	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1	PWR GND DP-O PWR GND DP-O I-3.3		
A57 A58 A59 A60 A61 A62 A63	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1+	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1	PWR GND DP-O PWR GND DP-O I-3.3		
A57 A58 A59 A60 A61 A62 A63 A64 A65	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1+ PCIE_TX1-	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1 PCI Express transmit lane 1	PWR GND DP-O PWR GND DP-O I-3.3 DP-O	3.3 V (S0)	
A57 A58 A59 A60 A61 A62 A63 A64 A65 A66 A67	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1+ PCIE_TX1- GND GPI2	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1 PCI Express transmit lane 1 Power ground General purpose input 2	PWR GND DP-O PWR GND DP-O I-3.3 DP-O PWR GND I-3.3	3.3 V (SO)	
A57 A58 A59 A60 A61 A62 A63 A64 A65 A66 A67	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1+ PCIE_TX1- GND GPI2 PCIE_TX0+	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1 PCI Express transmit lane 1 Power ground	PWR GND DP-O PWR GND DP-O I-3.3 DP-O PWR GND	3.3 V (S0)	
A57 A58 A59 A60 A61 A62 A63 A64 A65 A66 A67	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1- GND GPI2 PCIE_TX1- FCIE_TX1- GND GPI2	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1 PCI Express transmit lane 1 Power ground General purpose input 2 PCI Express transmit lane 0	PWR GND DP-O PWR GND DP-O I-3.3 DP-O PWR GND I-3.3	3.3 V (S0)	
A57 A58 A59 A60 A61 A62 A63 A64 A65 A66 A67 A68 A69 A70	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1+ PCIE_TX1- GND GPI2 PCIE_TX0- GND	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1 PCI Express transmit lane 1 Power ground General purpose input 2 PCI Express transmit lane 0 Power ground	PWR GND DP-O PWR GND DP-O I-3.3 DP-O PWR GND I-3.3	3.3 V (S0)	
A57 A58 A59 A60 A61 A62 A63 A64 A65 A66 A67 A68 A69 A70 A71	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1+ PCIE_TX1- GND GPI2 PCIE_TX0- GND LVDS_A0+	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1 PCI Express transmit lane 1 Power ground General purpose input 2 PCI Express transmit lane 0 Power ground LVDS channel A DATO or EDP Lane 2	PWR GND DP-O PWR GND DP-O I-3.3 DP-O PWR GND I-3.3	3.3 V (S0)	
A57 A58 A59 A60 A61 A62 A63 A64 A65 A66 A67 A68 A69 A70 A71 A72	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1+ PCIE_TX1- GND GPI2 PCIE_TX0+ PCIE_TX0- GND LVDS_A0+ LVDS_A0-	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1 PCI Express transmit lane 1 Power ground General purpose input 2 PCI Express transmit lane 0 Power ground LVDS channel A DATO or EDP Lane 2 transmit	PWR GND DP-O PWR GND DP-O I-3.3 DP-O PWR GND I-3.3 DP-O PWR GND DP-O	3.3 V (S0)	
A57 A58 A59 A60 A61 A62 A63 A64 A65 A66 A67 A68 A69 A70 A71	GND PCIE_TX3+ PCIE_TX3- GND PCIE_TX2+ PCIE_TX2- GPI1 PCIE_TX1+ PCIE_TX1- GND GPI2 PCIE_TX0- GND LVDS_A0+	Power ground PCI Express transmit lane 3 Power Ground PCI Express transmit lane 2 General purpose input 1 PCI Express transmit lane 1 Power ground General purpose input 2 PCI Express transmit lane 0 Power ground LVDS channel A DATO or EDP Lane 2	PWR GND DP-O PWR GND DP-O I-3.3 DP-O PWR GND I-3.3	3.3 V (S0)	

				COLIC DIGEO	ober darae nevir.
Pi n	COMe Signal	Description	Туре	Terminati on	Comment
A76	LVDS_A2-	LVDS channel A DAT2 or EDP Lane 0 transmit			
A77	LVDS_VDD_EN	LVDS or EDP panel power control	0-3.3	PD 100 kΩ	
A78	LVDS_A3+	LVDS channel A DAT3 transmit	DP-O		
A79	LVDS_A3-				
A80	GND	Power ground	PWR GND		
A81	LVDS_A_CK+	LVDS Channel A clock or EDP lane 3	DP-O		Clock 20 MHz to 80
A82	LVDS_A_CK-	transmit			MHz
A83	LVDS_I2C_CK	I2C Clock for LVDS display use or eDP AUX +	I/O-3.3	PU 2.2 kΩ, 3.3 V (S0)	
A84	LVDS_I2C_DAT	I2C Data line for LVDS display use or eDP AUX -	I/O-3.3	PU 2.2 kΩ, 3.3 V (S0)	
A85	GPI3	General purpose input 3	I-3.3	PU 100 kΩ 3.3 V (S0)	
A86	RSVD	Reserved for future use	NC		
A87	eDP_HPD	Detection of Hot Plug / unplug	I-3.3	PD 400 kΩ LVDS / 100 kΩ EDP	
A88 A89	PCIE_CK_REF+ PCIE_CK_REF-	Reference PCI Express clock for all PCI Express and PCI Express graphics lanes	DP-O		100 MHz
A90	GND	Power ground	PWR GND		
A91	SPI_POWER	3.3 V power output for external SPI Flash	0-3.3		100 mA maximum Only use to power SPI devices on Carrier Board.
A92	SPI_MISO	Data in to module from carrier SPI (SPI Master IN Slave Out)	I-3.3	PU 15 kΩ to 40 kΩ in PCH	All SPI signals tri-stated until reset deasserted.
A93	GPO0	General purpose output 0	0-3.3	PD 100 kΩ	
A94	SPI_CLK	Clock from module to carrier SPI	0-3.3	PU 15 kΩ to 40 kΩ in PCH (S5)	All SPI signals tri-stated with 20 KΩ CPU internal
A95	SPI_MOSI	Data out from module to carrier SPI	0-3.3	PU 15 kΩ to 40 kΩ in PCH (S5)	weak pull-up until reset deasserted.
A96	TPM_PP	TPM physical presence	I-3.3	PD 10 kΩ	TMP does not use this functionality.
A97	TYPE10#	Indicates to carrier board that Type 10 module is installed	NC		
A98	SERO_TX	Serial port 0 TXD	0-3.3		20 V protection circuit implemented on-module, PD on carrier boards needed for proper operation.
A99	SERO_RX	Serial port 0 RXD	I-5T	PU 47 kΩ, 3.3 V (S0)	20 V protection circuit implemented on-module.
A10 0	GND	Power ground	PWR GND		
A10 1	SER1_TX	Serial port 1 TXD	0-3.3		20 V protection circuit implemented on-module, PD on carrier board needed for proper operation.
A10 2	SER1_RX	Serial port 1 RXD	I-5T	PU 47 kΩ, 3.3 V (S0)	20 V protection circuit implemented
A10 3	LID#	LID switch input	I-3.3	PU 47 kΩ, 3.3 V (S5)	on-module.

Pi	COMe Signal	Description	Type	Terminati	Comment
n				on	
A10 4	VCC_12V	Main input voltage (4.75 V - 20V)	PWR 4.75 V		
A10 5	VCC_12V		-20 V		
A10 6	VCC_12V				
A10 7	VCC_12V				
A10 8	VCC_12V				
A10 9	VCC_12V				
A11 0	GND	Power ground	PWR GND		

⁺ and - Differential pair differentiator

5.2.2. Connector X1A Row B1 - B100

Table 27: Connector X1A Row B Pin Assignment (B1-B110)

Pi	COMe Signal	Description	Туре	Terminatio	Comment
n				n	
В1	GND	Power Ground	PWR GND		
В2	GBE0_ACT#	Ethernet activity LED indicator	OD		
В3	LPC_FRAME#	Indicates the start of an LPC cycle	0-3.3		
В4	LPC_AD0	LPC multiplexed command, address and	I/O-3.3	PU 15 KΩ-40 KΩ	
В5	LPC_AD1	data bus		in PCH (S5)	
В6	LPC_AD2				
В7	LPC_AD3				
В8	LPC_DRQ0#	LPC serial DMA master request	NC		
В9	LPC_DRQ1#				
B10	LPC_CLK	LPC 24 MHz clock output	0-3.3	PD 20 KΩ in PCH	24 MHz
B11	GND	Power Ground	PWR GND		
B12	PWRBTN#	Power Button - a falling edge creates a power button event	I-3.3	PU 10 KΩ, 3.3 V (S5eco)	Power button events can be used to bring a system out of S5 soft-off and other suspend states, as well as powering the system down.
B13	SMB_CLK	SMBus clock line	0-3.3	PU 2.56 KΩ, 3.3 V (S5)	
В14	SMB_DAT	SMBus bidirectional data line	1/0-3.3	PU 2.56 KΩ, 3.3 V (S5)	
B15	SMB_ALERT#	SMBus alert can be used to generate a SMI# or to wake the system	1/0-3.3	PU 2.2 KΩ, 3.3 V (S5)	
B16	SATA1_TX+	SATA 1 transmit data pair	DP-O		
В17	SATA1_TX-				
B18	SUS_STAT#	Indicates imminent suspend operation; used to notify LPC devices.	0-3.3		
В19	SATA1_RX+	SATA 1 receive data pair	DP-I		
B20	SATA1_RX-				
B21	GND	Power Ground	PWR GND		
B22	SATA3_TX+	SATA 3 transmit data pair	DP-O		
B23	SATA3_TX-				

Pi n	COMe Signal	Description	Туре	Terminatio n	Comment
B24	PWR_OK	Power OK from main power supply.	I-5T	PU 61 KΩ, 3.3 V	20 V protection circuit implemented on module
B25	SATA3_RX+	SATA 3 receive data pair	DP-I		
B26	SATA3_RX-				
В27	WDT	Watchdog time-out event has occurred	0-3.3	PD 10 KΩ	
B28	HDA_SDIN2	Audio Codec Serial data input 2	NC		Not supported
В29	HDA_SDIN1	Audio Codec Serial data input 1	I-3.3	PD 20 KΩ in	
В30	HDA_SDIN0	Audio Codec Serial data input 0		PCH	
B31	GND	Power Ground	PWR GND		
В32	SPKR	Speaker output provides the PC beep signal and is mainly intended for debugging purposes	0-3.3	PD 20 KΩ in PCH	PD is enabled until reset is deasserted
В33	I2C_CK	General purpose I2C port clock output	0-3.3	PU 2.21 KΩ, 3.3 V (S5)	
В34	I2C_DAT	General purpose I2C port data I/O line	1/0-3.3	PU 2.21 KΩ, 3.3 V (S5)	
В35	THRM#	Input from off-Module temp sensor indicating an over-temp situation	I-3.3	PU 10 KΩ to 3.3 V (S0)	No function implemented
В36	USB7-	USB 2.0 differential data pairs port	DP-I/O	PD 14.25 KΩ to	
В37	USB7+	7		24.8 KΩ in PCH	
в38	USB_4_5_OC#	USB overcurrent indicator port 4/5	I-3.3	PU 10 KΩ, 3.3 V (S5)	
В39	USB5-	USB 2.0 differential data pairs port	DP-I/O	PD 14.25 KΩ to	
В40	USB5+	5		24.8 KΩ in PCH	
B41	GND	Power Ground	PWR GND		
B42	USB3-	USB 2.0 differential data pairs port	DP-I/O	PD 14.25 KΩ to 24.8 KΩ in PCH	
В43	USB3+				
В44	USB_0_1_OC#	USB overcurrent indicator port 0/1	I-3.3	PU 10 KΩ, 3.3 V (S5)	
В45	USB1-	USB 2.0 differential data pairs port	DP-I/O	PD 14.25 KΩ to 24.8 KΩ in PCH	
B46	USB1+	1		24.0 1/52 111 FC11	
B47	EXCD1_PERST#	ExpressCard expansion, reset port 1	0-3.3	PD 10 KΩ	
B48	EXCD1_CPPE#	ExpressCard expansion, capable card request port 1	I-3.3	PU 10KΩ, 3.3 V (S0)	
В49	SYS_RESET#	Reset button input	I-3.3	PU 10 KΩ, 3.3 V (S5)	
B50	CB_RESET#	Reset output from module to carrier board	0-3.3	PU 10 KΩ, 3.3 V (S5)	
B51	GND	Power Ground	PWR GND		
B52	PCIE_RX5+	PCI Express receive lane 5	DP-I		
B53	PCIE_RX5-				
В54	GPO1	General purpose output 1	0-3.3	PD 100 KΩ	
B55	PCIE_RX4+	PCI Express receive lane 4	DP-I		
B56	PCIE_RX4-				
B57	GPO2	General purpose output 2	0-3.3	PD 100 KΩ	
B58	PCIE_RX3+	PCI Express receive lane 3	DP-I		
B59 B60	PCIE_RX3-	Power Ground	PWR		
B61	PCIE RX2+	PCI Express receive lane 2	DP-I		
B62	PCIE_RX2+ PCIE RX2-	101 Pybress receive Talle 5	DE-T		
B63	GPO3	General purpose output 3	0-3.3	PD 100 KΩ	
В64	PCIE RX1+	PCI Express receive lane 1	DP-I		
B65	PCIE RX1-				
B66	WAKEO#	PCI Express Wake Event wake up	I-3.3	PU 10 KΩ, 3.3	
	- "	signal		V (S5)	

Pi n	COMe Signal	Description	Type	Terminatio n	Comment
В67	WAKE1#	General purpose Wake Event wake up signal, to implement wake-up on PS2 keyboard or mouse	I-3.3	PU 10 KΩ, 3.3 V (S5)	
В68	PCIE_RX0+	PCI Express receive lane 0	DP-I		
В69	PCIE_RX0-				
В70	GND	Power Ground	PWR GND		
В71	LVDS_B0+	LVDS Channel B DAT0	DP-O		
В72	LVDS_B0-				
в73	LVDS_B1+	LVDS Channel B DAT1	DP-O		
В74	LVDS_B1-				
В75	LVDS_B2+	LVDS Channel B DAT2	DP-O		
В76	LVDS_B2-				
В77	LVDS_B3+	LVDS Channel B DAT3	DP-O		
В78	LVDS_B3-				
В79	LVDS/BKLT_EN	LVDS or EDP panel backlight enable (ON)	0-3.3	PD 100 KΩ	
B80	GND	Power Ground	PWR GND		
B81	LVDS_B_CK+	LVDS Channel B Clock	DP-O		20 MHz -80 MHz
B82	LVDS_B_CK-				
B83	LVDS_BKLT_CTRL	LVDS or EDP panel backlight brightness control	0-3.3		
В84	VCC_5V_SBY	5V Standby	PWR 5 V		Optional, not
В85	VCC_5V_SBY		(S5)		necessary in single supply mode
В86	VCC_5V_SBY				Supply mode
В87	VCC_5V_SBY				
B88	BIOS_DIS1#	BIOS selection strap to determine BIOS boot device	I-3.3	PU 10 KΩ, 3.3 V (S0)	PU might be powered during suspend
B89	VGA_RED	CRT Red/ Analog Video RGB-RED	OA	PD 150 Ω	Only on VGA option
В90	GND	Power Ground	PWR GND		
B91	VGA_GREEN	VGA Green/ Analog Video RGB-Green	OA	PD 150 Ω	Only on VGA option
B92	VGA_BLUE	VGA Blue/ Analog Video RGB-Blue	OA	PD 150 Ω	-
В93	VGA_HSYNC	Analog horizontal sync output to VGA monitor	0-3.3		
B94	VGA_VSYNC	Analog vertical sync output to VGA monitor	0-3.3		
В95	VGA_DDC_CLK	Display Data Channel (DDC) clock line	1/0-5	PU 2.4 KΩ, 3.3 V (S0)	
В96	VGA_DCC_DATA	Display Data Channel (DDC) data line	I/O-5	PU 2.4 KΩ, 3.3 V (S0)	
В97	SPI_CS#	Chip select for carrier board SPI	0 3.3		
В98	RSVD	Reserved for future use	NC		
В99	RSVD				
B10 0	GND	Power Ground	PWR GND		
B10 1	FAN_BWMOUT	Fan speed control by PWM Output	0-3.3		20 V protection circuit implemented on module, PD on carrier board needed for proper operation
B10 2	FAN_TACHIN	Fan tachometer input for fan with a two-pulse output	I-3.3	PU 47 KΩ, 3.3 V (S0)	20 V protection circuit implemented
B10 3	SLEEP#	Sleep button signal used by ACPI operating system to bring system to sleep state or wake it up again	I-3.3	PU 47 KΩ, 3.3 V (S5)	on module
B10 4	VCC_12V	Main input voltage (4.75 V - 20 V)	PWR		

Pi	COMe Signal	Description	Туре	Terminatio	Comment
n				n	
B10 5	VCC_12V		4.75 V- 20 V		
B10 6	VCC_12V				
B10 7	VCC_12V				
B10 8	VCC_12V				
B10 9	VCC_12V				
B11 0	GND	Power Ground	PWR GND		

⁺ and - Differential pair differentiator

5.2.3. Connector X1B Row C1 - C110

Table 28: Connector X1B Row C Pin Assignment (C1-C110)

Pi	COMe Signal	Doggrintion	Time	Terminatio	Commont
n	COME Signal	Description	Type	n	Comment
C1	GND	Power Ground	PWR GND	11	
C2	GND	Power Ground	PWR GND		
		HOD Compared marriage data arriage	DD T		
C3	USB_SSRX0-	USB SuperSpeed receive data pair 0	DP-I		
C4	USB_SSRX0+	D C	DUD CND		
C5	GND	Power Ground	PWR GND		
C6	USB_SSRX1-	USB SuperSpeed receive data pair 1	DP-I		
C7	USB_SSRX1+				
C8	GND	Power Ground	PWR GND		
C9	USB_SSRX2-	USB SuperSpeed receive data pair 2	DP-I		
C10	USB_SSRX2+				
C11	GND	Power Ground	PWR GND		
C12	USB_SSRX3-	USB SuperSpeed receive data pair3	DP-I		
C13	USB_SSRX3+				
C14	GND	Power Ground	PWR GND		
C15	DDI1_PAIR6+	DDI1 data pair 6	NC		
C16	DDI1_PAIR6-				
C17	RSVD	Reserved for future use	NC		
C18	RSVD				
C19	PCIE_RX6+	PCI Express receive lane 6	DP-I		
C20	PCIE_RX6-				
C21	GND	Power Ground	PWR GND		
C22	PCIE_RX7+	PCI Express receive lane 7	DP-I		
C23	PCIE_RX7-				
C24	DDI1_HPD	DDI1 Hotplug Detect	I-3.3	PD 100 KΩ	
C25	DDI1_PAIR4+	DDI1 data pair 4	NC		
C26	DDI1_PAIR4-				
C27	RSVD	Reserved for future use	NC		
C28	RSVD				
C29	DDI1_PAIR5+	DDI1 data pair 5	NC		
C30	DDI1_PAIR5-				
C31	GND	Power Ground	PWR GND		
C32	DDI2_CTRLCLK_AUX+	DDI2 clock	1/0-3.3	PD 100 KΩ	
C33	DDI2_CTRLDATA_AUX	DDI2 date	I/O-3.3	PU 100 KΩ, 3.3	
	-			V (S0)	
C34	DDI2_DDC_AUX_SEL	DDI2 select	I-3.3	PD 1 MΩ	
C35	RSVD	Reserved for future use	NC		
C36	DDI3_CTRLCLK_AUX+	DDI3 clock	I/O-3.3	PD 100 KΩ	
C37	DDI3_CTRLDATA_AUX	DDI3 date	1/0-3.3	PD 100 KΩ, 3.3 V (S0)	
C38	DDI3_DDC_AUX_SEL	DDI3 select	I-3.3	PD 1 MΩ	
C39	DDI3_PAIR0+	DDI3 data pair 0	DP-O		
C40	DDI3_PAIR0-	1			
C41	GND	Power Ground	PWR GND		
C42	DDI3_PAIR1+	DDI3 data pair 1	DP-O		
C43	DDI3 PAIR1-	1			
C44	DDI3 HPD	DDI3 Hotplug Detect	I-3.3	PD 100 KΩ	
C45	RSVD	Reserved for future use	NC		
C46	DDI3_PAIR2+	DDI3 data pair 2	DP-O		
C47	DDI3_TATR2+				
C48	RSVD	Reserved for future use	NC		
C40	1/0 / D	Wegetived for incure age	INC		

				COME DIVIDO	User Guide Rev.1.8
Pi n	COMe Signal	Description	Type	Terminatio n	Comment
C49	DDI3_PAIR3+	DDI3 data pair	DP-O		
C50	DDI3_PAIR3-	1			
C51	GND	Power Ground	PWR GND		
C52	PEG_RX0+	PCI Express Graphics (PEG) receive	DP-I		
C53	PEG_RX0-	lane 0			
C54	TYPEO#	Indicates the Carrier Board the pinout type and is not connected for type 6.	NC		NC for Type 6 module
C55	PEG_RX1+	PCI Express Graphics (PEG) receive	DP-I		
C56	PEG_RX1-	lane 1			
C57	TYPE1#	Indicates the Carrier Board the pinout type and is not connected for type 6.	NC		NC for Type 6 module
C58	PEG_RX2+	PCI Express Graphics (PEG) receive	DP-I		
C59	PEG_RX2-	lane 2			
C60	GND	Power Ground	PWR GND		
C61	PEG_RX3+	PCI Express Graphics (PEG) receive	DP-I		
C62	PEG_RX3-	lane 3			
C63	RSVD	Reserved for future use	NC		
C64	RSVD	1			
C65	PEG RX4+	PCI Express Graphics (PEG) receive	DP-I		
C66	PEG RX4-	lane 4			
C67	RSDN	Rapid Shutdown Trigger Input	I-5		Used for rapid shutdown option
C68	PEG_RX5+	PCI Express Graphics (PEG) receive	DP-I		
C69	PEG RX5-	lane 5			
C70	GND	Power Ground	PWR GND		
C71	PEG RX6+	PCI Express Graphics (PEG) receive	DP-I		
C72	PEG RX6-	lane 6			
C73	GND	Power Ground	PWR GND		
C74	PEG RX7+	PCI Express Graphics(PEG) receive	DP-I		
C75	PEG RX7-	lane 7			
C76	GND	Power Ground	PWR GND		
C77	RSVD	Reserved for future use	NC NC		
C78	PEG RX8+	PCI Express Graphics (PEG) receive	DP-I		
C79	PEG RX8-	lane 8			
C80	GND	Power Ground	PWR GND		
C81	PEG RX9+	PCI Express Graphics(PEG) receive	DP-I		
C82	PEG_RX9+	lane 9	D. 1		
C83	RSVD	Reserved for future use	NC		
C84	GND	Power Ground	PWR GND		
C84	PEG RX10+	PCI Express Graphics (PEG) receive	DP-I		
C86	_	lane 10	D1 1		
	PEG_RX10-	Power Cround	DMD CND		
C87	GND	Power Ground	PWR GND		
C88	PEG_RX11+	PCI Express Graphics (PEG) receive lane 11	DP-I		
C89	PEG_RX11-		DEAD CAND		
C90	GND	Power Ground	PWR GND		
C91	PEG_RX12+	PCI Express Graphics (PEG) receive lane 12	DP-I		
C92	PEG_RX12-				
C93	GND	Power Ground	PWR GND		
C94	PEG_RX13+	PCI Express Graphics (PEG) receive	DP-I		
C95	PEG_RX13-	lane 13			
C96	GND	Power Ground	PWR GND		
C97	RSVD	Reserved for future use	NC		
		•		*	•

Pi n	COMe Signal	Description	Туре	Terminatio n	Comment
C98	PEG_RX14+	PCI Express Graphics (PEG) receive	DP-I		
C99	PEG_RX14-	lane 14			
C10 0	GND	Power Ground	PWR GND		
C10 1	PEG_RX15+	PCI Express Graphics(PEG) receive lane 15	DP-I		
C10 2	PEG_RX15-				
C10 3	GND	Power Ground	PWR GND		
C10 4	VCC_12V	Main input voltage (4.75 V - 20 V)	PWR 4.75 V-		
C10 5	VCC_12V		20 V		
C10 6	VCC_12V				
C10 7	VCC_12V				
C10 8	VCC_12V				
C10 9	VCC_12V				
C11 0	GND	Power Ground	PWR GND		

⁺ and - Differential pair differentiator

5.2.4. Connector X1B Row D1 - D110

Table 29: Connector X1B Row D Pin Assignment (D1-D110)

Pi n	COMe Signal	Description	Туре	Termination	Comment
D1	GND	Power Ground	PWR GND		
D2	GND	-			
D3	USB SSTX0-	USB SuperSpeed transmit pair 0	DP-O		
D4	USB_SSTX0+	-			
D5	GND	Power Ground	PWR GND		
D6	USB_SSTX1-	USB SuperSpeed transmit pair 1	DP-O		
D7	USB_SSTX1+	1			
D8	GND	Power Ground	PWR GND		
D9	USB_SSTX2-	USB SuperSpeed transmit pair 2	DP-O		
D10	USB_SSTX2+	1			
D11	GND	Power Ground	PWR GND		
D12	USB_SSTX3-	USB SuperSpeed transmit pair 3	DP-O		
D13	USB_SSTX3+				
D14	GND	Power Ground	PWR GND		
D15	DDI1_CTRLCLK_AUX+	DDI1 clock	I/O-3.3	PD 100 KΩ	
D16	DDI1_CTRLDATA_AUX	DDI1 date	1/0-3.3	PU 100 KΩ, 3.3 V (S0)	
D17	RSVD	Reserved for future use	NC		
D18	RSVD				
D19	PCIE_TX6+	PCI Express transmit lane 6	DP-O		
D20	PCIE_TX6-				
D21	GND	Power Ground	PWR GND		
D22	PCIE_TX7+	PCI Express transmit lane 7	DP-O		
D23	PCIE_TX7-				
D24	RSVD	Reserved for future use	NC		
D25	RSVD				
D26	DDI1_PAIR0+	DDI1 data pair 0	DP-O		
D27	DDI1_PAIR0-				
D28	RSVD	Reserved for future use	NC		
D29	DDI1_PAIR1+	DDI1 data pair 1	DP-O		
D30	DDI1_PAIR1-				
D31	GND	Power Ground	PWR GND		
D32	DDI1_PAIR2+	DDI1 data pair 2	DP-O		
D33	DDI1_PAIR2-				
D34	DDI1_DDC_AUX_SEL	DDI1 select	I-3.3	PD 1 MΩ	
D35	RSVD	Reserved for future use	NC		
D36	DDI1_PAIR3+	DDI1 data pair 3	DP-O		
D37	DDI1_PAIR3-				
D38	RSVD	Reserved for future use	NC		
D39	DDI2_PAIR0+	DDI2 data pair 0	DP-O		
D40	DDI2_PAIR0-				
D41	GND	Power Ground	PWR GND		
D42	DDI2_PAIR1+	DDI2 data pair 1	DP-0		
D43	DDI2_PAIR1-				
D44	DDI2_HPD	DDI2 Hotplug Detect	I-3.3	PD 100 KΩ	
D45	RSVD	Reserved for future use	NC		
D46	DDI2_PAIR2+	DDI2 data pair 2	DP-O		
D47	DDI2_PAIR2-				
D48	RSVD	Reserved for future use	NC		
D49	DDI2_PAIR3+	DDI2 data pair 3	DP-0		

Pi	COMe Signal	Description	Туре	Termination	Comment
n D50	מתדק פתדת				
050	DDI2_PAIR3-	Power Ground	PWR GND		
52			-		
53	PEG_TX0+	PCI Express Graphics (PEG) transmit lane 0	DP-O		
054	PEG_TX0- PEG LANE RV#	PCI Express Graphics (PEG) Lane	NC		
JJ 4	PEG_LANE_KV#	Reversal	INC		
055	PEG TX1+	PCI Express Graphics (PEG)	DP-O		
056	PEG TX1-	transmit lane 1			
D57	TYPE2#	Indicates the Carrier Board the pinout type and is Ground for type 6 modules	PWR		GND for Type 6 module
558	PEG_TX2+	PCI Express Graphics (PEG)	DP-O		
59	PEG_TX2-	transmit lane 2			
060	GND	Power Ground	PWR GND		
061	PEG_TX3+	PCI Express Graphics (PEG)	DP-O		
062	PEG_TX3-	transmit lane 3			
063	RSVD	Reserved for future use	NC		
064	RSVD				
065	PEG_TX4+	PCI Express Graphics (PEG)	DP-O		
066	PEG_TX4-	transmit lane 4			
067	GND	Power Ground	PWR GND		
068	PEG_TX5+	PCI Express Graphics (PEG)	DP-O		
069	PEG_TX5-	transmit lane 5			
070	GND	Power Ground	PWR GND		
071	PEG_TX6+	PCI Express Graphics (PEG)	DP-0	_	
072	PEG_TX6-	transmit lane 6			
D73	GND	Power Ground	PWR GND		
D74	PEG_TX7+	PCI Express Graphics (PEG) transmit lane 7	DP-O		
D75	PEG_TX7-				
D76	GND	Power Ground	PWR GND		
077	RSVD	Reserved for future use	NC		
D78	PEG TX8+	PCI Express Graphics (PEG)	DP-O		
079	PEG TX8-	transmit lane 8			
080	GND	Power Ground	PWR GND		
081	PEG_TX9+	PCI Express Graphics (PEG)	DP-O		
082	PEG TX9-	transmit lane 9			
D83	RSVD	Reserved for future use	NC		
084	GND	Power Ground	PWR GND		
085	PEG_TX10+	PCI Express Graphics (PEG)	DP-O		
086	PEG_TX10-	transmit lane 10			
D87	GND	Power Ground	PWR GND		
880	PEG_TX11+	PCI Express Graphics (PEG)	DP-O		
D89	PEG_TX11-	transmit lane 11			
D90	GND	Power Ground	PWR GND		
091	PEG TX12+	PCI Express Graphics (PEG)	DP-O		
092	PEG_TX12-	transmit lane 12			
093	GND	Power Ground	PWR GND		
094	PEG TX13+	PCI Express Graphics (PEG)	DP-O		
095	PEG TX13-	transmit lane 13			
D96	GND	Power Ground	PWR GND		
D97	RSVD	Reserved for future use	NC NC		
		111 1 122			
98	PEG_TX14+	PCI Express Graphics (PEG)	DP-O		
D99	PEG TX14-	transmit lane 14			

Pi n	COMe Signal	Description	Туре	Termination	Comment
D10 0	GND	Power Ground	PWR GND		
D10 1	PEG_TX15+	PCI Express Graphics (PEG) transmit lane 15	DP-O		
D10 2	PEG_TX15-				
D10 3	GND	Power Ground	PWR GND		
D10 4	VCC_12V	Main input voltage (4.75 V - 20 V)	PWR 4.75 V-		
D10 5	VCC_12V		20V		
D10 6	VCC_12V				
D10 7	VCC_12V				
D10 8	VCC_12V				
D10 9	VCC_12V				
D11 0	GND	Power Ground	PWR GND		

⁺ and - Differential pair differentiator

6/uEFI BIOS

6.1. Starting the uEFI BIOS

The COMe-bKL6 uses a Kontron-customized, pre-installed and configured version of Aptio ® V uEFI BIOS based on the Unified Extensible Firmware Interface (uEFI) specification and the Intel® Platform Innovation Framework for EFI. This uEFI BIOS provides a variety of new and enhanced functions specifically tailored to the hardware features of the COMe-bKL6.



The BIOS version covered in this document might not be the latest version. The latest version might have certain differences to the BIOS options and features described in this chapter.



Register for the EMD Customer Section to get access to BIOS downloads and Product Change Notification (PCN) service.

The uEFI BIOS comes with a Setup program that provides quick and easy access to the individual function settings for control or modification of the uEFI BIOS configuration. The Setup program allows for access to various menus that provide functions or access to sub-menus with further specific functions of their own.

To start the uEFI BIOS Setup program, follow the steps below:

- 1. Power on the board.
- 2. Wait until the first characters appear on the screen (POST messages or splash screen).
- 3. Press the key.
- **4.** If the uEFI BIOS is password-protected, a request for password will appear. Enter either the User Password or the Supervisor Password (see Security Setup Menu), press <RETURN>, and proceed with step 5.
- 5. A Setup menu appears.

The COMe-bKL6 uEFI BIOS Setup program uses a hot key navigation system. The hot key legend bar is located at the bottom of the Setup screens. The following table provides a list of navigation hot keys available in the legend bar.

Table 30: Navigation Hot Keys Available in the Legend Bar

Sub-	Description			
screen				
<f1></f1>	<f1> key invokes the General Help window</f1>			
<->	<pre><minus> key selects the next lower value within a field</minus></pre>			
<+>	<plus> key selects the next higher value within a field</plus>			
<f2></f2>	<f2> key loads previous values</f2>			
<f3></f3>	<f3> key loads optimized defaults</f3>			
<f4></f4>	<f4> key Saves and Exits</f4>			
<→> or <←>	<pre><left right=""> arrows selects major Setup menus on menu bar, for example, Main or Advanced</left></pre>			
<_> or <_>	<pre><up down=""> arrows select fields in the current menu, for example, Setup function or sub-screen</up></pre>			
<esc></esc>	<pre><esc> key exits a major Setup menu and enters the Exit Setup menu Pressing the <esc> key in a sub-menu displays the next higher menu level</esc></esc></pre>			

<RETURN> key executes a command or selects a submenu

6.2. Setup Menus

The Setup utility features a selection bar at the top of the screen that lists the available menus:

- Main
- Advanced
- Chipset
- Security
- Boot
- Save & Exit


The currently active menu and the currently active uEFI BIOS Setup item are highlighted in white. Use the left and right arrow keys to select the Setup menus.


Each Setup menu provides two main frames. The left frame displays all available functions. Configurable functions are displayed in blue. Functions displayed in grey provide information about the status or the operational configuration. The right frame displays a Help window providing an explanation of the respective function.

6.2.1. Main Setup Menu

On entering the uEFI BIOS, the Setup program displays the Main Setup menu. This screen lists basic system information.

Figure 8: Main Setup Menu Initial Screens

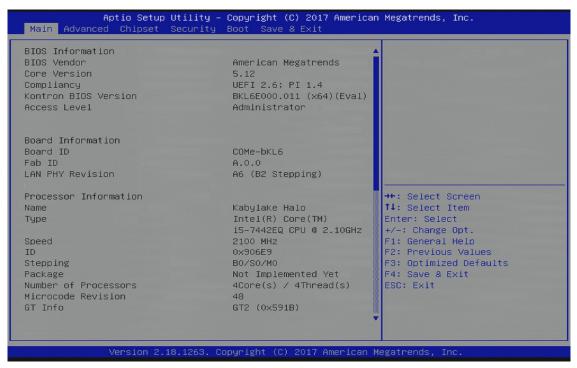

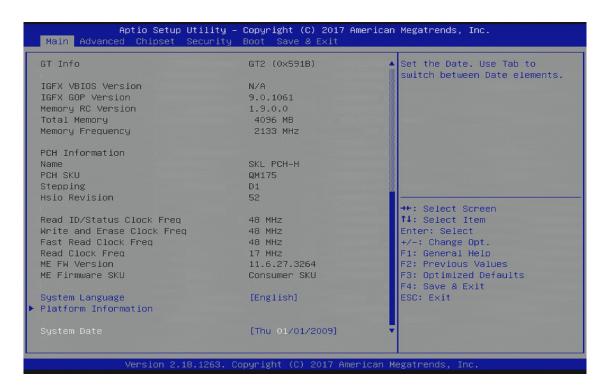

The following table shows Main sub-screens and functions, and describes the content. Default settings are in **bold**.

Table 31: Main Setup Menu Sub-screens

Board Information Displays Board Information: Board ID, Fab ID, and LAN PHY revision	Sub-Screen	Description
Board ID, Fab ID, and LAN PHY revision		_
Processor Information Displays Processor Information: Name, Type, Speed, ID, Stepping, Number of Processors, Microcode Revision, and GT Info Displays BIOS Version and Memory RC Version Information: IGFX VBIOS Version, IGFX GOP Version, Memory RC Version Total Memory and Memory Frequency. PCH		
Name, Type, Speed, ID, Stepping, Number of Processors, Microcode Revision, and GT Info Displays BIOS Version and Memory RC Version Information: IGFX VBIOS Version, IGFX GOP Version, Memory RC Version Total Memory and Memory Frequency. PCH Information Read only field Displays PCH information: Name, PCH SKU, Stepping, and Hsio Revision Displays SPI Clock Information: Read ID/Status Clock Frequency, Write and Erase Clock Frequency, and Fast Read Clock Frequency, Read Clock Frequency Displays Firmware Information: ME FWVersion and ME Firmware SKU System Language> [English] Platform Information Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		Read only field
IGFX VBIOS Version, IGFX GOP Version, Memory RC Version Total Memory and Memory Frequency. PCH Information Read only field Displays PCH information: Name, PCH SKU, Stepping, and Hsio Revision		Name, Type, Speed, ID, Stepping, Number of Processors, Microcode
Information Displays PCH information: Name, PCH SKU, Stepping, and Hsio Revision Displays SPI Clock Information: Read ID/Status Clock Frequency, Write and Erase Clock Frequency, and Fast Read Clock Frequency, Read Clock Frequency Displays Firmware Information: ME FWVersion and ME Firmware SKU System Language> Selects system default language Language> [English] Platform Information Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		IGFX VBIOS Version, IGFX GOP Version, Memory RC Version Total Memory
Name, PCH SKU, Stepping, and Hsio Revision **Displays SPI Clock Information:** Read ID/Status Clock Frequency, Write and Erase Clock Frequency, and Fast Read Clock Frequency, Read Clock Frequency **Displays Firmware Information:** ME FWVersion and ME Firmware SKU **System** Language> Selects system default language [English] Platform** Information Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		Read only field
Read ID/Status Clock Frequency, Write and Erase Clock Frequency, and Fast Read Clock Frequency, Read Clock Frequency Displays Firmware Information: ME FWVersion and ME Firmware SKU System Language> [English] Platform Information Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		
Fast Read Clock Frequency, Read Clock Frequency Displays Firmware Information: ME FWVersion and ME Firmware SKU System Language> Selects system default language [English] Platform Information Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		Displays SPI Clock Information:
ME FWVersion and ME Firmware SKU System Language> [English] Platform Information Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		
Language> [English] Platform Information > Read only field Displays Module Information Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		
Information Displays Module Information Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.	_	
Product Name, Revision, Serial # ,MAC Address, Boot Counter, and CPLD Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		Read only field
Rev Additional information for MAC Address The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		
The MAC address entry is the value used by the Ethernet controller and may contain the entry' Inactive' - Ethernet chip is inactive.		
may contain the entry' Inactive' - Ethernet chip is inactive.		Additional information for MAC Address
To activate the Ethernet chip set the following:		
		To activate the Ethernet chip set the following:
Advanced > Network Stack Configuration > Network Stack > Enable		Advanced > Network Stack Configuration > Network Stack > Enable
88:88:88:87:88 is a special pattern that will be filled in by the Ethernet firmware if there is no valid entry in the firmware block of the BIOS SPI (i.e. the MAC address has been overwritten during the last attempt to flash the system). For more information, see Chapter 6.5 Firmware Update.		Ethernet firmware if there is no valid entry in the firmware block of the BIOS SPI (i.e. the MAC address has been overwritten during the last attempt to flash the system). For more information, see Chapter
System Displays the system date	System Date>	Displays the system date [Week Day mm/dd/yyyy]
Week Day Week Day	System	
System Displays the system time	Time>	[hh:mm:ss]

6.2.2. Advanced Setup Menu

The Advanced Setup menu provides sub-screens and second level sub-screens with functions, for advanced configuration and Kontron specific configurations.



Setting items, on this screen, to incorrect values may cause system malfunctions.

Figure 9: Advanced Setup Menu Initial Screen



The following table shows the Advanced sub-screens and functions and described the content. Default settings are in **bold** and some functions include additional information.

Table 32: Advanced Setup menu Sub-screens and Functions

Sub-Screen	Function	Second level	Sub-Screen / Description
CPU Configurati on>			
	Intel (VMX) Virtualizati on Technology>		o utilize additional hardware capabilities anderpool Technology abled]
	Active Processor Cores>	Displays number of cores to be enabled in each processor package [All, 1, 2, 3]	
Power and Performance >	CPU Power Management Control>	Boot Performance Mode>	Selects the performance state the BIOS sets before OS handoff [Max. Non-Turbo Perf., Max. Battery, Turbo Perf.]

				COMe-DKL6 - User Guide Rev.1.8		
Sub-Screen	Function	Second level	Sub-Screen / De	scription		
Power and	CPU Power	Intel® Speedstep ™>	Allows support frequency range [Enabled, Disale			
Performance > (continued)	Control> (continued)		(continued)	Intel® Speed Shift Technology>	_	
		Turbo Mode>		ables Processor Turbo mode. st also be enabled.		
				oled unless the max. turbor than 16-SKL A0 W/A.		
		Config TDP Configurati ons>	Configurable TDP Boot Mode>	Selects the TDP Mode, where the deactivate option sets the MSR to nominal and MMIO to zero. [Nominal, Up, Down, Deactivate]		
			Configurable TDP Lock>	[Disabled]		
			CTDP BIOS Control>	[Disabled]		
			Config, TDP levels>	States the number of TDP levels (3)		
			ConfigTDP Turbo Activation Ratio>	Actual value for Turbo activation ratio (25 (unlocked))		
			Power Limit 1>	Displays power limit value in milli Watts (mW). Note: Value will be rounded to the next 1/8 W. Zero means: no custom override. (15.0 W (MSR:25.0))		
			Power Limit 2>	Displays power limit value in milli Watts (mW) (25.0 W (MSR: 15.0)		
			Customer Settings Nominal Config TDP Nominal>	Ratio:26, TAR:25, PL1:15.0		
			Power Limit 1>	Displays power limit value in mili Watts (mW). Note: . Value will be rounded to the next 1/8 W. Zero means: no custom override. (0)		
	CPU Power management Control>		Power Limit 2>	Displays power limit value in milli Watts (mW). Note: . Value will be rounded to the next 1/8 W. Zero		

Sub-Screen	Function	Second level	Sub-Screen / De:	scription
Power and Performance	(continued)	Config TDP		<pre>means: no custom override. (0)</pre>
> (continued)		Configurati ons> (continued)	Power Limit 1 Time Window>	Sets the time window for power limit 1. [0]
			ConfigTDP Turbo Activation Ratio>	Custom value for Turbo activation ratio. This needs to be configured with valid values from LFM to Max Turbo.
			Customer Settings Down ConfigTDP level 1>	Ratio:8, TAR:7, PL1:7.500 W
			Power Limit 1>	Displays power limit value in mili Watts (mW). Note: Value will be rounded to the next 1/8 W. Zero means: no custom override (0)
			Power Limit 2>	Displays power limit value in milli Watts (mW). Note: Value will be rounded to the next 1/8 W. Zero means: no custom override (0)
			Power Limit 1 Time Window>	Sets the time window for power limit 1 [0]
			Customer Settings UP ConfigTDP level 2>	Ratio:27, TAR:26, PL1:25.0 W
			Power Limit 1>	Displays power limit value in Watts. Note: . The value will be rounded to the next 1/8W. Zero means: no custom override. (0)
			Power Limit 2>	Displays power limit value in Watts Note: . The value will be rounded to the next 1/8W. Zero means: no custom override. (0)
	CPU Power management		Power Limit 1 Time Window>	Sets the time window for power limit 1 [0]
	Control> (continued)		ConfigTDP Turbo Activation Ratio>	Custom value for Turbo activation ratio. This needs to be configured with valid values from LFM to Max Turbo. (0)

Sub-Screen	Function	Second level	Sub-Screen / Description
Power and		Additional In	
Performance			lows for cTDP (=configurable thermal
>		_	to be set dynamically. This option is
(continued)			e for processors that really support this
		_	menu item will disappear for any other
			screen will also be different according
			s the CPU supports.
		_	are three levels to support: nominal,
		_	For each level the power limits, their
		_	nd the activation ratio may be chosen. A
			for the activation ratio means that this
		level is not	being used.
			re to create valid configurations to avoid
		unexpected be	havior of the system.
		C-states>	Enables or disables CPU power management
			to allow CPU to enter C-Sates when not
			100% utilized.
			[Enabled, Disabled]
		Enhanced C-	Enables or disables C1E. If enabled CPU
		state>	switches to minimum speed when all cores
			enter C-state.
			[Enabled, Disabled]
		Packaged C-	Maximum Package C-State limit setting.
		state	Default: leaves the factory default
		Limit>	value.
			Auto initializes to deepest available
			package c-state limit.
			[Auto, CPU Default, C10, C9, C8, C7S, C7,
			C6, C3, C2, C0/C1]
		Thermal	Enable/disable thermal monitor
		Monitor>	[Enabled, Disabled]
	GT Power	RC6 (Render	Check to enable render standby support.
	management	standby)>	[Enabled, Disabled]
	Control>	Maximum GT	Maximum GT frequency limited by user.
		Frequency>	Choose from range 350 MHz (RPN) to 1000
			MHz (RPO).
			Out of range values are clipped to the
			minimum and maximum range values above.
			[Default Max Frequency, 100 MHz, - 1200
			MHz]
PCH-FW	Read only fiel	ds	
Configurati	ME FW Version,	ME Firmware Mo	ode, ME Firmware SKU, ME File System
on>	Integrity Valu	•	
	ME Firmware St	atus 1, ME Firm	nware Status 2, NFC Support and ME State.
	ME State>		ME enters ME temporarily disabled mode.
		[Enabled, Dis	abled]
	ME Unconfig	If disabled,	ME is not unconfigured on RTC clear.
	ON RTC	[Enabled, Dis	abled]
	Clear>		
	Comms Hub	Support for C	omms hub
	Support>	[Enabled, Dis	abled]
	l.	l .	

Sub-Screen	Function	Second level	Sub-Screen / Description
	JHI Support>	Enables or di (JHI) [Enabled, Dis	sables Intel® DAL Host Interface Service
	Core BIOS Done Message>	Enables or di [Enabled, Dis	sables core BIOS done message sent to ME abled]
	Firmware Update Configuratio	ME FW Image Re-Flash>	Enables or disables ME FW Image RE-Flash function [Enabled, Disabled]
	n>	Local FW Update>	Read only field [Enabled]
Thermal Configurati on>	CPU Thermal Configuratio n>	DTS SMM>	ACPI thermal management uses either HWM reported values when disabled or DTS SMM mechanism to obtain CPU temperatures values when enabled. Note: enabling DTS might deteriorate the system's real time behavior through handling the necessary SMMs. [Enabled, Disabled, Critical Temp Reporting]
Thermal Configurati on> (continued)	CPU Thermal Configuratio n> (continued)	Tcc Activation Offset>	Displays the offset from the factory TCC (Thermal Control Circuit) activation temperature. Note: this values is subtracted from the TCC threshold, i.e. '0' means maximum allowed temperature. [0]
		ACPI T- states>	ACPI T-States [Enabled , Disabled]
	Platform Thermal Configuratio n>	Automatic Thermal Reporting>	Enable -configures ACPI thresholds according to INTEL thermal management settings and disable allows for manual configuration. [Enabled, Disabled]
		Critical Trip Point>	Controls the temperature of the ACPI Critical Trip Point at which OS shuts off the system. Note: The plan of record (POR) for Intel® Mobile Processors is 119°. [127°C, 119°C, 111°C, 103°C, 100°C, 95°C, 87°C, 79°C, 71°C, 63°C, 55°C, 47°C, 39°C, 31°C, 23°C, 15°C]
		Passive Trip Point>	Controls temperature of ACPI Passive Trip Point at which OS begins to throttle the processor. [119°C, 111°C, 103°C, 100°C, 95°C, 87°C, 79°C, 71°C, 63°C, 55°C, 47°C, 39°C, 31°C, 23°C, 15°C, Disabled]
		Passive TC1 Value>	Sets TC1 values for ACPI passive cooling formula (Range: 1-16) [1]

Sub-Screen	Function	Second level	Sub-Screen / Description
		Passive TC2	Sets TC2 values for ACPI passive cooling
		Value>	formula (Range: 1-16) [5]
		Passive TSP	Sets TSP value for ACPI passive cooling
		Value>	formula. TSP value represents how often
			OS reads the temperature when passive
			cooling is enabled. (Range: 2-32) [10]
		Passive	Passive Trip Points
		Trip	[Enabled, Disabled]
		Points>	
		Critical	Critical Trip Points
		Trip Points>	[Enabled, Disabled]
Intel ICC>	ICC/OC Watchdog		oses the ICC/OC watchdog timer to OS as
	Timer>		uses WDT HW when changing clock setting.
		[Enabled, Dis	
	ICC Locks	Read only fie	eld
	After EOP>	Specifies the	e ICC registers to write to, after end of
		post.	
		[Default]	
	ICC Profile>	Read only fie	
		Specified the	e ICC profile
Trusted	Security		sables BIOS support for security device.
Computing>	Device Support>		stem will not show security device. TCG EFI INT1A interface are not available.
		[Enabled, Dis	
	Active PCR	Read only fie	eld
	Banks>	Displays acti	ve PCR Banks [SHA-1,SHA256]
	Available	Read only fie	eld
Trusted	PCR Banks>	Displays avai	lable PCR Banks [SHA-1,SHA256]
Computing>	SHA-1 PCR	SHA-1 PCR Bar	
(continued)	Bank>	[Enabled, Dis	
	SHA256 PCR Bank>	SHA256 PCR Ba	
	-	,	•
	Pending Operation>	_	eration for Security Device er reboots on restart in order to change
	1,1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	_	the security device.
		[None, TPM Cl	-
	Platform	Platform Hier	archy
	Hierarchy>	[Enabled, Dis	sabled]
	Storage Hierarchy>	Storage Hiera [Enabled, Dis	-
	Endorsement	Endorsement H	lierarchy
	Hierarchy>	[Enabled, Dis	sabled]
	TPM2.0 UEFI	Selects TCG2	Spec Version support.
	Spec		empatible mode for Win8/Win10 and
	Version>		s TCG2 protocol + event format Win 10 or
		later.	

Sub-Screen	Function	Second level Sub-Screen / Description
		[TCG_1_2, TCG_2]
	Physical Presence Spec Version>	Select to tell OS to support either PPI Spec 1.2 or 1.3 Note: Some HCK tests might not support 1.3. [1.2, 1.3]
	TPM 20 InterfaceTyp e>	Read only field [TIS]
	Device Select>	BIOS support for security devices. Auto supports both TPM 1.2 and TPM 2.0. TPM 1.2 restricts support to TPM 1.2 devices and TPM 2.0 restricts support to TPM 2.0. devices. [TPM 1.2, TPM 2.0, Auto]
ACPI settings>	Enable ACPI Auto Configuratio n>	Enables or disables BIOS ACPI auto configuration. If enabled, the system uses generic ACPI settings that may not fit the system best. [Enabled, Disabled]
	Enable Hibernation>	Enables or disables systems ability to hibernate (OS/S4 Sleep State) This option may not be effective with some operating systems.
		[Enabled , Disabled]
	ACPI Sleep State>	Selects highest ACPI sleep state that the system enters when SUSPEND button is pressed [Suspend Disabled, S3 (Suspend to Ram)]
	Lock Legacy Resources>	Enables or disable lock of legacy resources [Enabled, Disabled]
	S3 Video Repost>	Enables or disables S3 video repost [Enabled, Disabled]
Miscellaneo us>	Watchdog>	<pre>Auto</pre>
		Global Enable sets all Watchdog registers (except Lock> for WD_KICK) to read only, until board is reset. [Enabled, Disabled]
Miscellaneo		Stage 1 Selects action for this Watchdog stage Mode> [Disabled, Reset, NMI, SCI, Delay, WDT Signal only]
(continued)	Programmable s	ormation two-staged watchdog tages to trigger different actions - If one stage is the next stage is also disabled.
	Common actions 'Watchdog sign	for a watchdog trigger events 'Delay', 'Reset' and al only'
		ws for triggering NMI or SCI. This needs programming of ction inside the BIOS and therefore can only be used in IOS solution.
	Timeouts that second and 30	can be set to eight different fixed values between 1 minutes.
	Reset Button Behavior>	Selects reset button behavior [Chipset Reset, Power cycle]

Sub-Screen	Function	Second level Sub-Screen / Description
202 2010011	I2C Speed>	Selects internal I2C bus speed between (1 kHz and 400
		kHz)
		[200 kHz]
	On-board I2C	Keep 'Multimaster' setting unless otherwise noted
	Mode>	[MultiMaster, BusClear]
	Manufacturin	Read only field
	g Mode>	[Disabled]
	LID Switch	Shows or hides Lid Switch Inside ACPI OS. The default
	Mode>	setting is disabled.
	_	[Disabled, Active normal, Active inverse]
	Sleep Button Mode>	Shows or hides Sleep Button inside ACPI OS. Default setting is disabled.
	Mode/	[Enabled, Disabled]
	ACPI	Sets mode used for temperature polling through the
	Temperature	OSPM
	Polling>	(0 is disabled and 1 enabled9.
		[Enabled, Disabled]
	TZ00	Displays the time interval in seconds, between two
	Temperature	attempts to measure temperature in ACPI thermal zone
	Polling>	00 (Ambient temperature)
		[30]
	TZ01 Temperature	Displays the time interval in seconds, between two attempts to measure temperature in ACPI thermal zone
	Polling>	01 (CPU temperature)
		[30]
	PCI	Controls PCIe port for ExpressCard support
	ExpressCard	If not used, keep in the disabled state.
	0>	[Port 1, Port 2, Port 3, Port4, Disabled]
	PCI	Controls PCIe port for ExpressCard support
	ExpressCard	If not used, keep in the disabled state.
	1>	[Port 1, Port 2, Port 3, Port4, Disabled]
SMART	Smart Self	Run Smart Self Test on all HDDs during POST
Settings>	Test>	[Enabled, Disabled]
H/W	CPU	Read only field
Monitor>	Temperature>	Displays CPU temperature in °C
	Module Temperate>	Read only field
		Displays module temperature in °C
	CPU Fan - Fan Control>	Sets Fan Control mode for CPU fan Disable - stops fan.
		Manual - manually sets the fan
		Auto - Hardware monitor controls cooling, similar to
		ACPI based 'Active Cooling', without producing a
		software load to the system.
ц/м		[Disable, Manual, Auto]
H/W Monitor>	CPU Fan -	Displays number of pulses fan produces during 1
(continued)	Fan Pulse>	revolution. (Range: 1-4)
,	CDII 5	
	CPU Fan - Fan Trip	Displays temperature at which the fan accelerates. (Range: 20°C - 80°)
	Point>	[50]
	1	<u>I</u>

Sub-Screen	Function	Second level Sub-Screen / Description
	CPU Fan - Trip Point Speed>	Displays Fan speed at trip point in %. Minimum value is 30 %. Fan always runs at 100 % at TJmax (-10°C). [50]
	CPU Fan - Ref. Temperature>	Determines temperature source used for automatic fan control [PCH Temperature, Module Temperature, CPU Temperature]
	External Fan- Fan Control>	Sets Fan Control mode for external fan Disable - stops the fan Manual - manually set the fan Auto - hardware monitor controls cooling, similar to ACPI based 'Active Cooling', without producing a software load to the system. [Disable, Manual, Auto]
	External Fan- Fan Pulse>	Displays number of pulse fan produces during 1 revolution (Range: 1-4) [2]
	External Fan- Fan Trip point>	Displays temperature at which fan accelerates. (Range: 20°C to 80°C) [50]
	External Fan- Trip Point Speed>	Displays Fan speed at trip point in %. Minimum value is 30% Fan always runs at 100% at TJmax (-10°C) [50]
	External Fan Reference Temperature>	Determines temperature source used for automatic fan control [PCH Temperature, Module Temperature, CPU Temperature]
	An external fa	ormation External Fan n can be connected to baseboard. The external fan's are routed via the COMe connector.
	5.0V Standby>	Read only field Displays standby voltage
	Batt Volt. at COMe Pin>	Read only field Displays battery voltage at COMe pin
	Widerange Vcc>	Read only field Displays wide range VCC
Serial Port Console Redirection	COMO Console Redirection>	Console redirection via COMe module's COM1. If redirection is enabled then the port settings such as Terminal type, Bits per second, Data bits, Parity etc. can be adjusted here. Note: on-module COM ports do not support flow control. [Enabled, Disabled]
	COM1 Console Redirection>	Console redirection via COMe module's COM2. If redirection is enabled, then the port settings such as Terminal type, Bits per second, Data bits, Parity etc. can be adjusted here. Note: On-module COM ports do not support flow control. [Enabled, Disabled]

Sub-Screen	Function	Second level Sub-	-Screen / Description
Serial Port Console Redirection > (continued)	COM2 Console Redirection>	Console redirection optional Winbond disabled) If redirection is	ion via COM3, available with an SuperIO on the baseboard. (Default is senabled, then the port settings such e, Bits per second, Data bits, Parity sted here.'
	COM3 Console Redirection Settings>	optional Winbond disabled) If redirection is as Terminal type,	SuperIO on the baseboard. (Default is senabled, then the port settings such Bits per second, Data bits, Parity sted in 'Settings'.
	Legacy Console Redirection>	Legacy Serial Redirection Port>	Selects a COM port to display redirection of legacy OS and legacy OPROM messages [COMO, COM1, COM2, COM3]
	Serial Port for Out-of-Band Management / Windows EMS Console Redirection>	Console redirecti [Enabled, Disable	
SIO Configurati on>	Serial Port 0>	Use This Device>	Enables or disables the use of this logical device. [Enabled, Disabled]
		Logical Device Settings: Current>	Read only field IO=3F8h; IRQ=4
		Logical Device Settings: Possible>	Allows the user to change the device's resource settings. New settings are reflected on the Setup page after system restarts.
			[Use Automatic Settings, IO=3F8h; IRQ=4, IO=3F8h; IRQ=3,4,5,7,9,10,11,1, IO=2F8h; IRQ=3,4,5,7,9,10,11,12, IO=3E8h; IRQ=3,4,5,7,9,10,11,12, IO=2E8h; IRQ=3,4,5,7,9,10,11,12]
	Serial Port 1>	Use This Device>	Enables or disables the use of this logical device. [Enabled, Disabled]
		Logical Device Settings: Current>	Read only field IO=2F8h; IRQ=3
		Logical device settings: Possible>	Allows the user to change the device's resource settings. New settings are reflected on the Setup page after system restart.

Sub-Screen	Function	Second level Sub-Screen / Description
		[Use Automatic Settings,
		IO=2F8h; IRQ=3,
		IO=3F8h; IRQ=3,4,5,7,9,10,11,1,
SIO		IO=2F8h; IRQ=3,4,5,7,9,10,11,12,
Configurati		IO=3E8h; IRQ=3,4,5,7,9,10,11,12,
on>		IO=2E8h; IRQ=3,4,5,7,9,10,11,12]
(continued)	Additional Inf	
		additional interfaces such as Serial Port 2, Serial
	_	callel Port will be included within the SIO Configuration
	setup page.	arier fore will be included within the bro configuration
		guration menu enables all available serial interfaces to
		The module-based serial interfaces always appear as
	COM1 and COM2.	COM 1 and COM 2 can be treated as 16550-compatible
		erfaces at the standard I/O addresses and are based in
	the on-module	CPLD. Note: Hardware flow control is not supported.
		the baseboard contains an activated SuperIO of the type
		then its serial interfaces are added to the system as COM3 and COM4 IRQ and I/O addresses are configurable in
	this menu, too	
	·	hipset internal COMs are not supported due to technical
		meir driver must be installed. Installing the driver does
		these serial interfaces are useable.
	Warning: Logic	al Devices state on the left side of the control
		current logical device state. Changes made during the
	setup session	are shown after restarting the system.
PCI	PCI Latency	Displays value to be programmed into the PCI latency
Subsystem	_	Displays value to be programmed into the PCI latency timer register
	PCI Latency	Displays value to be programmed into the PCI latency
Subsystem	PCI Latency Timer>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency
Subsystem	PCI Latency Timer> PCI-X Latency	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register
Subsystem	PCI Latency Timer> PCI-X Latency Timer>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248]
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping
Subsystem	PCI Latency Timer> PCI-X Latency Timer>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248]
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR#	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR#
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled]
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR#	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR#
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled]
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR#	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR#
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding.
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding. [Enabled, Disabled]
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G Decoding>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding. [Enabled, Disabled] BIOS Enable - allows BIOS built in hot-plug
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G Decoding>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding. [Enabled, Disabled] BIOS Enable - allows BIOS built in hot-plug support
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G Decoding>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding. [Enabled, Disabled] BIOS Enable - allows BIOS built in hot-plug support Support> Note: Use if OS does not support PCIe and
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G Decoding>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding. [Enabled, Disabled] BIOS Hot Plug Support Note: Use if OS does not support PCIe and SHPC hot-plug natively.
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G Decoding>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding. [Enabled, Disabled] BIOS Hot Plug Support Note: Use if OS does not support PCIe and SHPC hot-plug natively. [Enabled, Disabled]
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G Decoding>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding. [Enabled, Disabled] BIOS Hot Plug Support Note: Use if OS does not support PCIe and SHPC hot-plug natively. [Enabled, Disabled] PCI Buses Padd PCI Buses behind the bridge for hot-
Subsystem	PCI Latency Timer> PCI-X Latency Timer> VGA Palette Snoop> PERR# Generation> SERR# Generation> Above 4G Decoding>	Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Displays value to be programmed into the PCI latency timer register [32, 64, 96, 128, 160, 192, 224, 248] Enables or disables VGA palette register snooping [Enabled, Disabled] Enables or disables PCI device to generate PERR# [Enabled, Disabled] Enables or disables PCI device to generate SERR# [Enabled, Disabled] Enables or disables decoding in Address Space above '4G' for 64 bit capable devices. Note: Only if system supports 64 bit PCI decoding. [Enabled, Disabled] BIOS Hot Plug Support Note: Use if OS does not support PCIe and SHPC hot-plug natively. [Enabled, Disabled]

			COME-DALO - USER GUIGE REV.1.0			
Sub-Screen	Function	Second level	Sub-Screen / Description			
		I/O	Padd PCI resources behind the bridge for			
		Resources	hot-plug			
		Padding>	[Disabled, 4 k, 8 k, 16 k, 32 k]			
		MMIO 32 bit	Padd PCI MMIO 32 bit resources behind the			
		Resources	bridge for hot-plug.			
		Padding>	[Disabled, 1 M, 2 M, 4 M, 8 M, 16, M, 32			
			M, 64 M, 128 M]			
		PFMMIO 32 bit	Padd PCI MMIO 32 bit pre-fetchable resources behind the bridge for hot-plug.			
		Resources	[Disabled, 1 M, 2 M, 4 M, 8 M, 16, M, 32			
		Padding>	M, 64 M, 128 M]			
Network	Network	If HEFT netwo	ork stack is enabled, the Ethernet chip is			
Stack	Stack>	active.	in stack is enabled, the Benefinet emp is			
Configurati		[Enabled, Dis	abled]			
on>		,	-			
CSM	CSM Support>	Enables or di	sables CSM Support			
Configurati			the CSM details can be changed. Below			
on>		_	Execution' are 'Network, 'Storage', 'Video'			
	CSM Support>	and 'Other PC				
CSM	(continued)		ck' must be changed to' Legacy' for legacy			
Configurati on>		[Enabled, Dis	t setting is 'Do not launch').			
(continued)	744:	,	anteu]			
, , , , , , , , , , , , , , , , , , , ,	Additional Inf		(CSM) configuration is important for			
	legacy operati		(CSM) configuration is important for			
			for modern OS such as Windows 8, 10 and			
	Linux.		, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,			
	If a legacy OS	is used or a	Windows or Linux system is run in legacy			
			or detailed option settings.Note, a change			
	_	_	ffect after the next restart. Therefore,			
		etup and re-en	ized settings, it is recommended to save			
		-	settings requires special care. Any OS			
	_		output needs the 'Video' option set to			
	'Legacy', in t	he same way th	at PXE boot needs 'Network' 'Optional ROM'			
	to be set to '	Legacy'.				
NVMe	Read only fiel	d				
Configurati		2	Me (Non-Volatile memory PCIe) devices			
on>	connected to t					
	[NO NVME Devic	e round]				
Switchable	SG Mode	Read only fie	eld			
Graphics>	Select>	Switchable gr	aphics selection			
		[Muxless]				
USB	Read only fiel	ds				
Configurati						
on>	devices					
	Legacy USB	Enable- Suppo	orts legacy USB			
	Support>	Auto- disable	es legacy support, if no USB devices are			
		connected				
		_	USB devices available for EFI			
		applications				
		[Enabled, Dis	Sabled, Autoj			

Sub-Screen	Function	Second level Sub-Screen / Description
	XHCI Hand- off>	<pre>XHCI ownership change claimed by XHCI driver. Note: this is a work around for OS(s) without XHCI hand-off support. [Enabled, Disabled]</pre>
	USB Mass Storage Driver Support>	Enables or disables USB mass storage driver support [Enabled, Disabled]
	Port 60/64 Emulation>	Enables I/O port 60h/64h emulation support Note: Enable for USB keyboard legacy support for non- USB aware OS(s). [Enabled, Disabled]
	USB Transfer Time-out>	Displays timeout value for control, bulk and interrupt transfers [1 sec, 5 sec, 10 sec, 20 sec]
	Device Reset Time-out>	Displays USB mass storage device start unit command time-out [10 sec, 20 sec, 30 sec, 40 sec]
	Device Power-up Delay>	Displays maximum time taken for the device to report itself to the host properly. Auto uses the default :root port 100 ms /hub port delay from hub port descriptor. [Auto, Manual]

6.2.3. Chipset Setup Menu

On entering the Chipset Setup menu, the screen lists two sub-screen options:

- System Agent (previously Northbridge)
- PCH-IO (previously Southbridge)

6.2.3.1. Chipset > System Agent Configuration

Figure 10: System Agent Configuration Menu Initial Screen

Aptio Setup Utilit Chipset	y – Copyright (C) 2017	American Megatrends, Inc.
System Agent (SA) Configuration		Graphics Configuration
SA PCIe Code Version VT–d	1.9.0.0 Supported	
► Graphics Configuration ► PEG Port Configuration ► Memory Configuration		
VT-d	[Enabled]	
		++: Select Screen †1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.18.126	3. Copyright (C) 2017 An	merican Megatrends, Inc.

The following table shows System Agent Configuration sub-screens and functions, and describes the content. Default settings are in **bold**.

Table 33: Chipset Set > System Agent Configuration Sub-screens and Functions

Function	Second level Sub-Screen / Description				
SA PCIe Code Version>	Read only field States versions of the code				
VT-d >	Read only field States if virtualization is supported				
Graphics Configuratio n>	Graphics Turbo IMON Current>				
	Skip Scanned for External GfX Card>	If enabled, no scan is made for external Gfx cards on PEG or PCH PCIE ports. Default setting is disabled. [Enabled, Disabled]			
	Internal Graphics>	To keep IGFX enabled, based on setup options [Auto, Enabled, Disabled]			


Function	Second level Sub	-Screen / Descrip	tion				
Graphics Configuratio n >	GTT Size>	Select GTT size [2 MB, 4 MB, 8 M	us]				
(continued)	Aperture Size>	Select Aperture size. Note: above 4GB MMIO, BIOS assignment is automatically enabled when selecting 2048 MB aperture. Note:To use this feature disable CSM support. [128 MB, 256 MB, 512 MB, 1024 MB, 2048 MB]					
	DVMT Pre-Allocated>	Select DVMT 5.0 pre-allocated (fixed) graphics me size used by internal graphics device. [0 M, 32 M, 64 M, 4 M, 8 M, 12 M, 16 M 20 M 24 M, M 32 M/F7, 36 M, 40 M, 44 M, 48 M, 52 M 56 M 60 M]					
	DVMT Total Gfx Mem>	Select DVMT 5.0 graphics device [256M, 128M, MAX	graphics memory size used by internal				
	Gfx Low Power Mode>	Used for SFF onl [Enabled, Disabl					
	VDD Enable>	Enables or disables VDD forcing in BIOS [Enabled, Disabled]					
	HDCP Support>	HDCP provisioning BIOS support [Enabled, Disabled]					
	Algorithm>	HDCP re-encryption flow [One-time, Periodic]					
	PM Support>	Enables or disables PM support [Enabled, Disabled] Enables or disables PAVP [Enabled, Disabled]					
	PAVP Enable>						
	Cdynmax Clamping Enable>	Enables or disabled cdynmax clamping [Enabled, Disabled]					
	Cd Clock Frequency>	Select highest Cd clock frequency supported by platform [337.5 MHz, 450 MHz, 540 MHz, 675 MHz]					
	IGD Configuration>	depth, and Chann	Data format, Resolution; Colour lel count. Note: Optionally visible is use in auto mode or if LFP has				
		IGD- Boot Type>	Selects the video device activated during post.				
			If external graphics are present, this has no effect. [Auto, EFP, LFP, EFP3, EFP2]				
		LFP Panel Type>	Selects panel type connected to eDP port as native eDP or LVDS via a bridge. Note: Depends on hardware option of the module.				
			[LVDS, eDP]				

Function	Second level Sub-Screen / Description					
Graphics Configuratio n > (continued)	IGD Configuration>	Backlight Control>	Backlight control settings options [None external, PWM, PWM Inverted, I2C]			
	(continued)	PWM Frequency>	Set LCD backlight PWM frequency [200 Hz, 400 Hz, 1 kHz, 2 kHz, 4 kHz, 8kHz, 20 kHz, 40 KHz]			
		Backlight Value>	Sets LCD backlight brightness range: (0-255) [128]			
		LVDS Clock Center Spreading>	Selects the LVDS clock frequency center spreading depth [No Spreading, 0.5%, 1.0%, 1.5%, 2.0%, 2.5 %]			
		EFP1 Type>	<pre>Integrated HDMI/DisplayPort configuration with external connectors [DisplayPort Only, DP with HDMI/DVI, HDMI/DVI]</pre>			
		EFP1 LSPCON>	HDMI2.0 feature Level shifter/protocol converter [Enabled, Disabled]			
		EFP2 Type>	Integrated HDMI/DisplayPort configuration with external connectors [DisplayPort Only, DP with HDMI/DVI, HDMI/DVI]			
		EFP2 LSPCON>	HDMI2.0 feature Level shifter/protocol converter [Enabled, Disabled]			
		EFP3 Type>	<pre>Integrated HDMI/DisplayPort configuration with external connectors [DisplayPort Only, DP with HDMI/DVI, HDMI/DVI]</pre>			
		EFP3 LSPCON>	HDMI2.0 feature Level shifter/protocol converter [Enabled, Disabled]			
		Mode Persistence>	Mode persistence [Enabled, Disabled]			
		Center Mode>	Selects the display device that should be centered [Enabled, Disabled]			
PEG Port Configuratio n>	PEG Configuration>	modes	2x8, 2x8 rev, 1x8+2x4, 1x8+2x4 rev]			
	PEG 0:1:0 - PEG0 or	Enable Root Port>	Enables or disables the root port			

Function	Second level Sub-	-Screen / Descrip	tion			
	PEG 0:1:1 -		[Enabled, Disabled, Auto]			
	PEG1 or PEG 0:1:2 - PEG2	Max Link Speed>	Configure PEG #:#:# maximum speed [Auto, Gen1, Gen2, Gen3]			
		PEGO Slot Power Limit Value>	Sets power supply upper limit by slot. Power limit (watts) is calculated by multiplying this value by the Slot Power Limit scale. (0 - 255) [75]			
PEG Port Configuratio		PEGO Slot Power Limit Scale>	Selects scale used for the slot power limit value [1.0x, 0.1x, 0.01x, 0.001X]			
n> (continued)		PEGO Physical Slot Number>	Sets the port's slot number. This number must be globally unique within the chassis (0 - 8191).			
	Peg Port Feature Configuration>	Detect Non- Compliance device>	Detects non-compliance PCIe device in PEG [Enabled, Disabled]			
	PCIe Spread Spectrum Clocking>	Allows spreader clocking to be disabled for compliance testing [Enabled, Disabled]				
Memory Configuratio n>	_	ion, Memory frequency, Memory timings (tCL, tRCD, tRP, 0 slot 0, Size, Channel 0 slot 1, Channel 1 slot 0 and				
	ECC Support>	Enables or disa	ables DDR ECC support oled]			
Max TOLUD> Sets the maximum TOLUD value. Dynamic adjustsTOLUD automatically, based on length of the installed graphic cont: [Dynamic, 1 GB, 1.25 GB, 1.5 GB, 1.75 GB, 2.5 GB, 2.75 GB, 3 GB, 3.25 GB, 3.5 GB]			itomatically, based on largest MMIO installed graphic controller. 1.25 GB, 1.5 GB, 1.75 GB, 2 GB, 2.25 GB,			
VT-d>	VT-d capability [Enabled/Disabled					

6.2.3.2. Chipset > PCH-IO Configuration

Figure 11: PCH-IO Configuration Menu Initial Screen

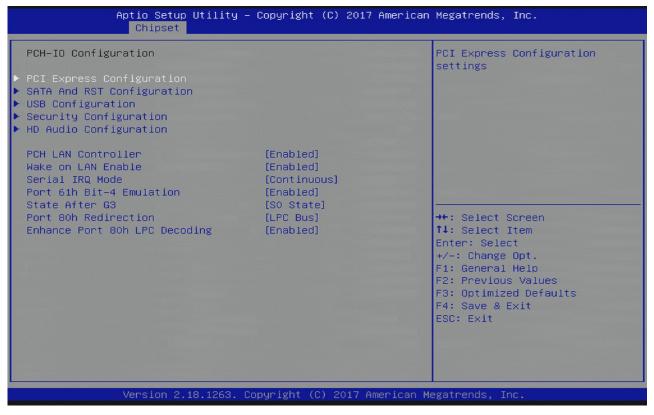

The following table shows the PCH-IO sub-screens and functions, and describes the content. Default settings are in **bold** and some functions include additional information.

Table 34: Chipset Set > PCH-IO Configuration Sub-screens and Functions

Function	Second level S	Sub-Screen / Description	
PCI Express Configuration >	PCI Express Clock Gating>	PCI Express clock gating for each root port [Enabled, Disabled]	
	Legacy IO Low Latency>	Enables low latency of legacy I/O as some systems require lower I/O latency irrespective of power. This is a tradeoff between power and I/O latency. [Enabled, Disabled]	
	DMI Link ASPM Control>	Control of Active State Power Management on SA side of DMI link [Enabled, Disabled]	
	PCIE Port Assigned toLAN>	Read Only file This port is always 5. [5]	
	Port8xh Decode>	PCI express port 8xh decode [Enabled, Disabled]	
	PCI Express Clock Gating>	PCI Express clock gating for each root port [Enabled, Disabled]	

Function	Second level Sub-Screen / Description						
PCI Express Configuration > (continued)	Compliance Test Mode>	Enable when using compliance load board [Enabled, Disabled]					
(concinued)	PCIe-USB Glitch W/A	For bad USB device(s) connected behind PCIE/PEG Port [Enabled, Disabled]					
	PCIe Function Swap	_					
	PCI Root Port 1 (COMe PCIe#4)>	PCIe Root port[#]>	Controls the PCI Express root ports [1, 2, 3, 4, 9, 10, 11, 12] Note: Uses the CPU enumeration [Enabled, Disabled]				
	or PCI Root Port 2 (COMe	Topology>	Identifies the SATA Topology [Unknown, x1, x4, SATA Express, M.2.]				
	PCIe#5)>	ASPM>	Sets ASPM level [Auto, LOsL1, L1, LOs, Disabled]				
	PCI Root Port 3 (COMe	L1 Substates>	PCI Express L1 substrates settings. [Disabled, L1.1, L1.2, L1.1 &L1.2]				
	PCIe#6) > or PCI Root Port 4 (COMe PCIe#7) > or PCI Root Port 9 (COMe PCIe#0) > or PCI Root Port 10 (COMe PCIe#1) > or PCI Root Port 11 (COMe PCIe#2) > or PCI Root Port 11 (COMe PCIe#3) > or	Gen3 Eq Phase3 method>	PCIe Gen3 Equalization phase 3 method [Hardware, Static Coeff., Software Search]				
		UPTP>	Upstream Port Transmitter Preset [5]				
		DPTP>	Downstream Port Transmitter Preset [7]				
		ACS>	Access Control Service Extended Capability [Enabled, Disabled]				
		URR>	PCI Express unsupported request reporting [Enabled, Disabled]				
		FER>	PCI Express device fatal error reporting [Enabled, Disabled]				
		NFER>	PCI Express device non-fatal error reporting [Enabled, Disabled]				
		CER>	PCI Express device correction error reporting [Enabled, Disabled]				
		CT0>	PCIe Express Completion timer (T0) [Enabled, Disabled]				
		SEFE>	Root PCI Express System Error on Fatal Error				

Function	Second level	Sub-Screen / Desci	ription
PCI Express			[Enabled, Disabled]
Configuration > (continued)		SENFE>	Root PCI Express System Error on non-Fatal Error [Enabled, Disabled]
(concinaca)		SECE>	Root PCI Express System Error on correctable error [Enabled, Disabled]
		PME SCI>	PCI Express PME SCI [Enabled, Disabled]
		Hot Plug>	PCI Express hot plug [Enabled, Disabled]
	PCI Root Port 1	Advanced Error reporting>	Advanced -error reporting [Enabled, Disabled]
	(COMe PCIe#4)>	PCIe Speed>	Configures PCIe speed [Auto, Gen 1, Gen 2, Gen3]
	or PCI Root Port 2	Transmitter Half Swing>	Transmitter half swing [Enabled, Disabled]
	(COMe PCIe#5)> or PCI Root Port 3 (COMe PCIe#6)> or PCI Root Port 4 (COMe PCIe#7)> or PCI Root Port 9 (COMe PCIe#0)> or PCI Root Port 10 (COMe PCIe#1)> or PCI Root Port 11 (COMe PCIe#2)> or	Detector Timeout>	Number of mSeconds the reference code waits for a link to exit detect state for enabled ports before assuming there is no device and potentially disabling the port.
		Extra Bus Reserved>	Extra bus reseved (0-7) for bridges behind this root bridge. [0]
		Reserved Memory>	Reserved memory for this root bridge Range: (1MB-20MB) [10]
		Reserved I/O>	Reserved IO for this root bridge Range: (4 k, 8 k, 16 k, 20 k) [4]
		PCH PCIE1 LTR>	PCH PCIE latency reporting [Enabled, Disabled]
		Snoop latency Override>	Snoop latency override or Non Snoop Override for PCH PCIE. Disabled: to disable override Manual: to manually enter override
		Non Snoop latency Override>	values and Auto (default): maintain default BIOS flow. [Disabled, Manual, Auto]
		Force LTR Override>	Force LTR override for PCH PCIE. Disabled: LTR override not forced Enable: LTR overrides values forced and LTR messages from device are ignored. [Enabled, Disabled]
	(continued)	PCIE1 LTR Lock>	PCIE LTR configuration lock

Function	Second level Sub-Screen / Description					
PCI Express				[Enab	oled, Disabled]	
Configuration > (continued)	Mapı		CLKREQ ing ride>	platf	PCIE CLKREQ Override for default platform mapping [Default, No CLKREQ, Custom number]	
	Extra Options> Extra	Detect Non- Compliance Device>		devic time	Detects non-compliance PCI express device. If enabled, It takes more time at post time. [Enabled, Disabled]	
	Options> (continued)	Pref Memo	etch ry>		tchable memory range for this bridge	
			rved Memon	Reser 31)bi [1]	ved memory alignments Range:((ts) –
		Memo	etchable ry nment>		etchable memory alignments e: (0-31) bits	
	based numbers. For is mentioned. Take numbering varies s The standard layou layouts may be pro- Intel firmware on require a differen The PCIE BIOS layouts		every land care to se rongly. for PCIe rammed by he BIOS SI PCIe layout to for COMe ustomer ap	consists flashing PI flash out with	anes consists of a default BIO: ons and offers two additional	or e ou
	BIOS binaries	PCI	e F	PCIe	Name Extension	
	Default	4x1		x1	(8x1)	
	Alternativ e 1	1×4	4	x1	1x4_4x1	
	Alternativ e 2	1x4	1	.x4	2x4	
	Other layouts are available on customer request, contact Kontron Support if you require a different PCIe layout for your project.					
SATA and RST Configuration	SATA Controlle	er>	SATA device [Enabled, Disabled]			
>	SATA Mode Selection>		Determines SATA controllers operation [AHCI, Intel RST Premium]			
	SATA Test Mode	:>	Test mode enable/disable (loop back) [Enabled, Disabled]			
	Software Feature Mask Configuration>		HDD Unlock>	Enable indicates HDD password unlock in OS enabled. [Enabled, Disabled]		in

Function	Second level Sub-Screen / Description				
		LED Locate>	hardwar feature	indicated that LED/SGPIO e is attached and ping to locate is enabled in OS. d, Disabled]	
	Aggressive LPM Support>	state	CH to ago	gressively enter link power	
	SATA Controller Speed>	controll	er	imum support supported by SATA Gen2, Gen3]	
SATA and RST	Serial ATA Port 0	Software Preserve		Read only field	
Configuration > (continued)	Serial ATA Port 1 or Serial ATA Port 2 or	Port #>		SATA port # [Enabled, Disabled]	
	Serial ATA Port 3 Serial ATA Port 0	Hot Plug	>	Designates port as Hot plug [Enabled, Disabled]	
	or Serial ATA Port 1 or Serial ATA Port 2 or Serial ATA Port 3 (continued)	Configured as eSATA>		Read only field	
		Spin Up	Device>	If enabled staggered spin-up is performed and only drives with this option enabled will spin up at boot. Otherwise all drives spin up at boot spin up device. [Enabled, Disabled]	
		SATA Dev Type>	ice	Identifies if SATA port is connected to a solid-state drive or hard disk drive. [Hard Disk Drive, Solid State Drive]	
		Topology	>	Identify the SATA Topology [Unknown, ISATA, Direct Connect, FLEX, M2]	
		SATA Por DevSlp>	t#	SATA Port# DevSlp [Enabled, Disabled]	
		DITO Configur	ation>	DITO configuration [Enabled, Disabled]	
		DITO Val	ue>	Read only field [625]	
		DM Value	>	Read only field [15]	
USB Configuration >	XHCI Disable Compliance Mode>	Option to disable compliance mode Default is false and compliance mode is not disabled. True disables compliance mode [False, True]		ance mode is not disabled. True	
	xDCI Support>	xDCI (USB OTG device)			


Function	Second level Sub-So	creen / Descri	ption
		[Enabled, Di	sabled]
	USB Port Disable Override>	corresponding connection t	enables or disables the g USB port from reporting a device to the controller gelect Per-Pin]
Security Configuration >	RTC Lock>	Enable locks byte bank of [Enabled, Di	
	BIOS Lock>		
HD Audio Configuration >	HD Audio>	Auto enables present othe enabled or d	ection of the HD-Audio device HD if present or disables if not erwise HD Audio is unconditionally disabled sabled, Auto
HD Audio Configuration > (continued)	Audio DSP>	Enables or d	isables audio DSP .sabled]
(continued)	HDA-Link Codec Select>	External cod	codec board codec (single verb table) or lec kit (multiple verb table) board, External Kit]
	iDisplay Audio Disconnect>	Disconnects audio codec [Enabled, Di	SDI2 signal to hide/disable iDisplay
	PME Enable>	Enables PM w post. [Enabled, Di	wake of HD audio controller during
	HD Audio Advanced Configuration>	I/O Buffer Ownership>	Selects the ownership of the I/O buffer between Intel HD audio link and I2S port (for bilingual codecs). [HD-Audio Link, HD-Audio Link/I2S Port, I2S Port]
		I/O Buffer Voltage Select>	Selects the voltage operation mode of the I/O buffer [3.3 V, 1.8 V]
		HD Audio Link>	Selects HD audio link frequency Applicable only if HDA codec supports selected frequency. [6 MHz, 12 MHz, 24 MHz]
		iDisplay Link Frequnecy >	Selects iDisplay Link frequency. Applicable only if iDisp codec supports selected frequency. [48 MHz, 96 MHz]

Function	Second level Sub-Screen / Description
PCH LAN Controller>	On-board NICs [Enabled, Disabled]
Wake on LAN>	Integrated LAN to wake the system If ME is on in the Sx state, Wake On Lan cannot be disabled. [Enabled, Disabled]
Serial IRQ Mode>	Configure serial IRQ mode [Quiet, Continuous]
Port 61h Bit- 4 Emulation>	Emulates Port 61h bit-4 toggling in SMM [Enabled, Disabled]
State After G3>	Specifies state to go to when power is re-applied after power failure (G3 State). [SO State, S5 State]
Port 80h Redirection>	Controls where Port 80h cycles are sent [LPC Bus, PCIE Bus]
Enhanced Port 80h LPC Decoding>	Supports word/dword decoding of port 80h behind LPC. [Enabled, Disabled]

6.2.4. Security Setup Menu

The Security Setup menu provides information about the passwords and functions for specifying the security settings. The passwords are case-sensitive.

Figure 12: Security Setup Menu Initial Screen

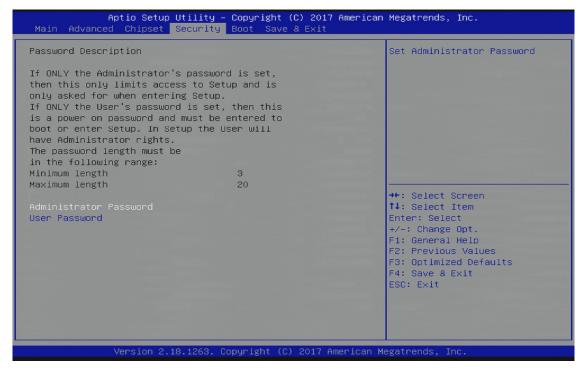

The following table shows Security sub-screens and functions.

Table 35: Security Setup Menu Functions

Function	Description
Administrator Password>	Set administrator password
User Password>	Set user password

If only the administrator's password is set, then only access to the setup is limited and is requested when entering the setup.



If only the user's password is set, then the password is a power on password and must be entered to boot or enter setup. In the setup the user has administrator rights.

The required password length in characters is max. 20 and min. 3.

6.2.4.1. Remember the Password

It is highly recommended to keep a record of all passwords in a safe place. Forgotten passwords results in the user being locked out of the system.

If the system cannot be booted because the User Password or the Supervisor Password are not known, clear the uEFI BIOS settings, or contact Kontron Support for further assistance.




HDD security passwords cannot be cleared using the above method.

6.2.5. Boot Setup Menu

The Boot Setup menu lists dynamically generated boot device priority order.

Figure 13: Boot Setup Menu Initial Screen

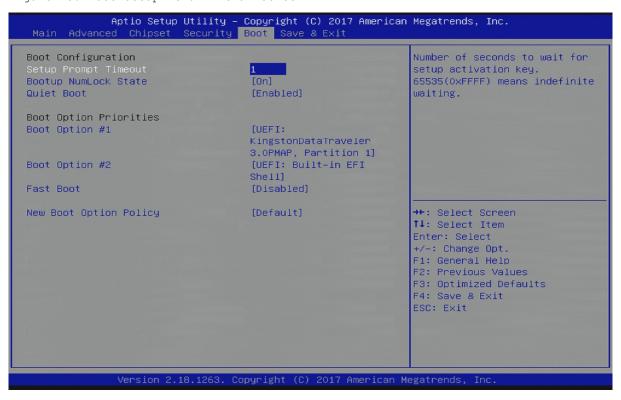

The following table shows Boot sub-screens and functions, and describes the content. Default settings are in **bold**.

Table 36: Boot Setup Menu Functions


Function	Description
Setup Prompt Timeout>	Displays number of seconds to wait for the setup activation key. 65535(OXFFF) means indefinite waiting
Bootup NumLock State>	Selects keyboard NumLock state [On, Off]
Quiet Boot>	Enables or disables Quiet Boot [Enabled, Disabled]
Boot Option #1>	Sets the system boot order (option 1) [UEFI kingstonDataTraveler 3.0PMAP partition 1, UEFI Built-in EFI shell, Disabled]
Boot Option 2	Sets the system boot order (option 2) [UEFI kingstonDataTraveler 3.0 PMAP partition 1, UEFI Built-in EFI shell, Disabled]

Function	Description
Fast Boot>	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. This has no effect for BBS boot options. [Enabled, Disabled]
New Boot Option Policy>	Controls placement of newly detected UEFI boot options [Default, Place First, Place Last]

6.2.6. Save and Exit Setup Menu

The Save and Exit Setup menu provides functions for handling changes made to the uEFI BIOS settings and exiting the Setup program.

Figure 14: Save and Exit Setup Menu Initial Screen

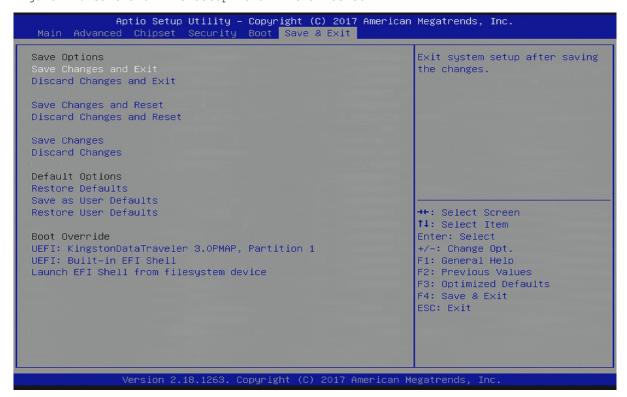

The following table shows Save & Exit sub-screens and functions, and describes the content.

Table 37: Save and Exit Setup Menu Functions

Function	Description
Save Changes and Exit>	Exits system after saving changes
Discard Changes and Exit>	Exits system setup without saving changes
Save Changes and Reset>	Reset system after saving changes
Discard Changes and Reset>	Resets system setup without saving changes
Save Changes>	Saves changes made so far for any setup options

Function	Description
Discard Changes>	Discards changes made so far for any setup options
Restore Defaults>	Restores/loads standard default values for all setup options
Save as User Defaults>	Saves changes made so far as user defaults
Restore User Defaults>	Restores user defaults to all setup options
UEFI Built-in EFI shell>	Attempts to launch the built in EFI Shell
Launch EFI Shell from File System Device>	Attempts to launch EFI Shell application (Shell.efi) from one of the available file system devices

6.3. The uEFI Shell

The Kontron uEFI BIOS features a built-in and enhanced version of the uEFI Shell. For a detailed description of the available standard shell scripting, refer to the EFI Shell User Guide. For a detailed description of the available standard shell commands, refer to the EFI Shell Command Manual. Both documents can be downloaded from the EFI and Framework Open Source Community homepage (http://sourceforge.net/projects/efi-shell/files/documents/).



AMI APTIO update utilities for DOS, EFI Shell and Windows are available at AMI.com:

http://www.ami.com/support/downloads/amiflash.zip.



Kontron uEFI BIOS does not provide all shell commands described in the EFI Shell Command Manual.

6.3.1. Basic Operation of the uEFI Shell

The uEFI Shell forms an entry into the uEFI boot order and is the first boot option by default.

6.3.1.1. Entering the uEFI Shell

To enter the uEFI Shell, follow the steps below:

To enter the uEFI Shell, follow the steps below:

- 1. Power on the board.
- 2. Press the <F7> key (instead of) to display a choice of boot devices.
- 3. Choose 'UEFI: Built-in EFI shell'.

```
EFI Shell version 2.40 [5.11]
Current running mode 1.1.2
Device mapping table
Fs0 :HardDisk - Alias hd33b0b0b fs0
Acpi(PNP0A03,0)/Pci(1D|7)/Usb(1, 0)/Usb(1, 0)/HD(Part1,Sig17731773)
```

Press the ESC key within 5 seconds to skip startup.nsh, and any other key to continue.

- **4.** The output produced by the device-mapping table can vary depending on the board's configuration.
- 5. If the ESC key is pressed before the 5 second timeout elapses, the shell prompt is shown:

Shell>

6.3.1.2. Exiting the uEFI Shell

To exit the uEFI Shell, follow one of the steps below:

- 1. Use the exit uEFI Shell command to select the boot device, in the Boot menu, that the OS will boot from.
- ${\bf 2.}$ Reset the board using the reset uEFI Shell command.

6.4. uEFI Shell Scripting

6.4.1. Startup Scripting

If the ESC key is not pressed and the timeout has run out then the uEFI Shell tries to execute some startup scripts automatically. It searches for scripts and executes them in the following order:

- 1. Initially searches for Kontron flash-stored startup script.
- 2. If there is no Kontron flash-stored startup script present then the uEFI-specified startup.nsh script is used. This script must be located on the root of any of the attached FAT formatted disk drive.
- 3. If none of the startup scripts are present or the startup script terminates then the default boot order is continued.

6.4.2. Create a Startup Script

Startup scripts can be created using the uEFI Shell built-in editor edit or under any OS with a plain text editor of your choice. To create a startup shell script, simply save the script on the root of any FAT-formatted drive attached to the system. To copy the startup script to the flash, use the kBootScript uEFI Shell command.

In case there is no mass storage device attached, the startup script can be generated in a RAM disk and stored in the SPI boot flash using the kRamdisk uEFI Shell command.

6.4.3. Examples of Startup Scripts

6.4.3.1. Execute Shell Script on other Harddrive

This example (startup.nsh) executes the shell script named bootme.nsh located in the root of the first detected disc drive (fs0).

fs0:

bootme.nsh

6.5. Firmware Update

Firmware updates are typically delivered as a ZIP archive containing only the firmware images. The content of the archive with the directory structure must be copied onto a data storage device with FAT partition.

6.5.1. Updating Procedure

BIOS can be updated with the Intel tool fpt.efi using the procedure below:

- 1. Copy these files to an USB stick.
 - flash.nsh (if available)
 - fpt.efi
 - parts.txt
 - bkl6r<xxx>.bin (where xxx stands for the version #)
- 2. Start the system into setup (see Chapter 6.1 Starting the uEFI BIOS).
- 3. Check that the following entries are set to their default setting:

 ${\tt Advanced} \, > \, {\tt PCH} \, \, {\tt FW} \, \, {\tt Configuration} \, > \, {\tt Firmware} \, \, {\tt update} \, \, {\tt configuration} \, > \, {\tt ME} \, \, {\tt FW} \, \, {\tt Image} \, \, {\tt Re-Flash} \, > \, {\tt Disabled}$

 ${\tt Advanced} \, > \, {\tt PCH} \, \, {\tt FW} \, \, {\tt Configuration} \, > \, {\tt Firmware} \, \, {\tt update} \, \, {\tt configuration} \, > \, {\tt Local} \, \, {\tt FW} \, \, {\tt Update} \, > \, {\tt Enabled}$

Then, change the setup option:

Chipset > PCH-IO Configuration > BIOS Security Configuration > BIOS Lock > Disabled

- 4. Save and Exit BIOS setup.
- 5. On the next start, boot into shell (see Chapter 6.3.1.1 Entering the uEFI Shell).
- 6. Change to the drive representing the USB stick.

fsx: (x = 0,1,2,etc. represents the USB stick)

Change to the directory where you copied the flash tool.

cd <your directory>

7. Start flash.nsh (if available)

OR type

fpt -SAVEMAC -F bkl6r<xxx>.bin

8. Wait until flashing is successful and then power cycle the board.



Do not switch off the power during the flash process! Doing so leaves your module unrecoverable.



Changes under point 3 are only effective during the first boot after the changes were applied. If you fail to flash during the next boot then you might have to repeat steps 3.



Do not forget to apply -SAVEMAC. If SAVEMAC is not applied then your system will lose it's system MAC address. If the MAC address is accidentally deleted, contact Kontron Support.

Appendix A: List of Acronyms

Table 38: List of Acronyms

ACPI	Advanced Configuration Power Interface
API	Application Programming Interface
Basic Module	COM Express® 125 x 95 Module form factor
BIOS	Basic Input Output System
BMC	Base Management Controller
BSP	Board Support Package
BPP	Bit Per Pixel
CAN	Controller-area network
Carrier Board	Application specific circuit board that accepts a COM Express ® module
COM	Computer-on-Module
Compact Module	COM Express® 95x95 Module form factor
CNTG	Computer Network Transaction Group
DDC	Display Data Control
DDI	Digital Display Interface -
DIMM	Dual In-line Memory Module
Display Port	DisplayPort (digital display interface standard)
DMA	Direct Memory Access
DRAM	Dynamic Random Access Memory
DVI	Digital Visual Interface
EAPI	Embedded Application Programming Interface
ECC	Error Checking and Correction
EEPROM	Electrically Erasable Programmable Read-Only Memory
eDP	Embedded Display Port
EMC	Electromagnetic Compatibility (EMC)
ESD	Electro Sensitive Device
Extended Module	COM Express® 155mm x 110mm Module form factor.
FIFO	First In First Out
FRU	Field Replaceable Unit
Gb	Gigabit
GBE	Gigabit Ethernet
GPI	General Purpose Input
GPIO	General Purpose Input Output
	•

GPU Graphics Processing Unit HBR2 High Bitrate 2 HDA High Definition Audio (HD Audio) HD/HDD Hard Disk /Drive HDMI High Definition Multimedia Interface HPM PICMG Hardware Platform Management specification family I2C Inter integrated Circuit Communications IOL IPMI-Over-LAN IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical layer device		
HBR2 High Bitrate 2 HDA High Definition Audio (HD Audio) HD/HDD Hard Disk /Drive HDMI High Definition Multimedia Interface HPM PICMG Hardware Platform Management specification family I2C Inter integrated Circuit Communications IOL IPMI-Over-LAN IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI Peripheral Component Control Interface PCI Pilatform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	GPO	General Purpose Output
HDA High Definition Audio (HD Audio) HD/HDD Hard Disk /Drive HDMI High Definition Multimedia Interface HPM PICMG Hardware Platform Management specification family I2C Inter integrated Circuit Communications IOL IPMI-Over-LAN IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI Peripheral Component Interface PCI Peripheral Component Interface PCI Peripheral Component Control Interface PEG PCI Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	GPU	
HD/HDD Hard Disk /Drive HDMI High Definition Multimedia Interface HPM PICMG Hardware Platform Management specification family I2C Inter integrated Circuit Communications IOL IPMI-Over-LAN IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	HBR2	High Bitrate 2
HDMI High Definition Multimedia Interface HPM PICMG Hardware Platform Management specification family I2C Inter integrated Circuit Communications IOL IPMI-Over-LAN IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	HDA	,
Interface HPM PICMG Hardware Platform Management specification family I2C Inter integrated Circuit Communications IOL IPMI-Over-LAN IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	HD/HDD	Hard Disk /Drive
Management specification family I2C Inter integrated Circuit Communications IOL IPMI-Over-LAN IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI Peripheral Component Interface PCI Peripheral Component Control Interface PEG PCI Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	HDMI	_
Communications IOL IPMI-Over-LAN IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	НРМ	Management specification
IOT Internet of Things IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	I2C	_
IPMI Intelligent Platform Management Interface KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	IOL	IPMI-Over-LAN
KCS Keyboard Controller Style KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCI PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	IOT	Internet of Things
KVM Keyboard Video Mouse LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	IPMI	
LAN Local Area Network LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	KCS	Keyboard Controller Style
LPC Low Pin-Count Interface: LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	KVM	Keyboard Video Mouse
LVDS Low Voltage Differential Signaling - M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	LAN	Local Area Network
M.A.R.S. Mobile Application for Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	LPC	Low Pin-Count Interface:
Rechargeable Systems MDI Media Dependent Interface MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	LVDS	_
MEI Management Engine Interface Mini COM Express® 84x55mm Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	M.A.R.S.	
Mini Module Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	MDI	Media Dependent Interface
Module form factor MTBF Mean Time Before Failure NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	MEI	Management Engine Interface
NA Not Available NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical		_
NC Not Connected NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	MTBF	Mean Time Before Failure
NCSI Network Communications Services Interface PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	NA	Not Available
PATA Parallel AT Attachment PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	NC	Not Connected
PCI Peripheral Component Interface PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	NCSI	
PCIe PCI-Express PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	PATA	Parallel AT Attachment
PCN Product Change Notification PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	PCI	Peripheral Component Interface
PECI Platform Environment Control Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	PCIe	PCI-Express
Interface PEG PCI Express Graphics PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	PCN	Product Change Notification
PICMG® PCI Industrial Computer Manufacturers Group PHY Ethernet controller physical	PECI	
Manufacturers Group PHY Ethernet controller physical	PEG	PCI Express Graphics
Zenernes constarrer physical	PICMG®	
	PHY	

Pin-out Type	COM Express® definitions for signals on COM Express® Module connector pins.
PS2	Personal System 2 (keyboard & mouse)
PSU	Power Supply Unit
RoHS	Restriction of Hazardous Substances
RTC	Real Time Clock
SAS	Serial Attached SCSI - high speed serial version of SCSI
SATA	Serial AT Attachment:
SCSI	Small Computer System Interface
SEL	System Event Log
ShMC	Shelf Management Controller
SMBus	System Management Bus
SO-DIMM	Small Outline Dual in-line Memory Module

SOIC	Small Outline Integrated Circuit
SOL	Serial Over LAN
SPI	Serial Peripheral Interface
SSH	Secure Shell
TPM	Trusted Platform Module
UART	Universal Asynchronous Receiver Transmitter
UEFI	Unified Extensible Firmware Interface
UHD	Ultra High Definition
ULP	Ultra Low Power
USB	Universal Serial Bus
VGA	Video Graphics Adapter
VLP	Very Low Profile
WDT	Watch Dog Timer
WEEE	Waste Electrical and Electronic Equipment (directive)



About Kontron - Member of the S&T Group

Kontron is a global leader in IoT/Embedded Computing Technology (ECT). As part of the S&T technology group, Kontron offers individual solutions in the areas of Internet of Things (IoT) and Industry 4.0 through a combined portfolio of hardware, software and services. With its standard and customized products based on highly reliable state-of-the-art technologies, Kontron provides secure and innovative applications for a wide variety of industries. As a result, customers benefit from accelerated time-to-market, lower total cost of ownership, extended product lifecycles and the best fully integrated applications.

For more information, please visit: www.kontron.com



GLOBAL HEADQUARTERS

Kontron Europe GmbH Gutenbergstraße 2 85737 Ismaning Germany Tel.: +49 821 4086-0 Fax: +49 821 4086-111 info@kontron.com